

**Z068.188**

## Adapter for power tool SVC 07.1 (for power tool emergency operation SVC/SVM)

### References for operation and assembly

#### Article no.      Description

Z068.188      Order number for adapter for power tool related to SVC 07.1 and SVM 07.1 actuators

### Scope of delivery




Z068.190

#### Units      Article no.      Description

1      Z068.190      Adapter for power tool (for power tool emergency operation of SVC /SVM actuators)

### Assembly

- Remove screw at handwheel and remove handwheel.
- Place adapter for power tool Z068.190 on handwheel shaft.

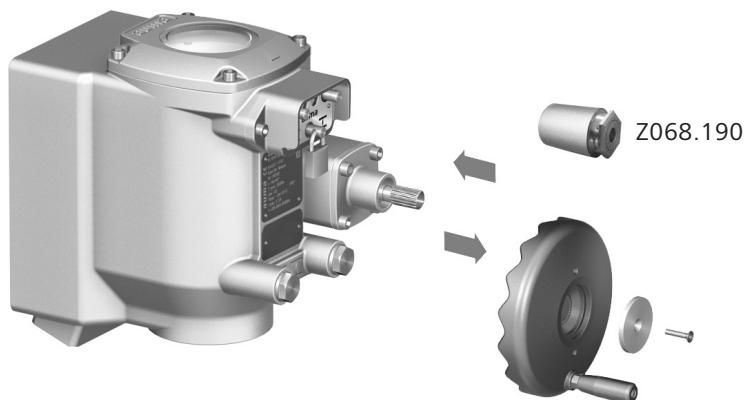

### References for operation

For safe actuator operation using the adapter for power tool, the maximum torques and output speeds at the handwheel indicated in the table below must not be exceeded.

Torque at handwheel for maximum actuator output torque		Respective maximum output speed at handwheel
SVC/SVM 05.1	10 Nm	90 rpm
SVC/SVM 07.1	20 Nm	70 rpm
SVC/SVM 07.1	40 Nm	40 rpm
Maximum torque at handwheel		Respective maximum output speed at handwheel
SVC/SVM 05.1	15 Nm	60 rpm
SVC/SVM 07.1	30 Nm	50 rpm
SVC/SVM 07.1	40 Nm	40 rpm
Maximum output speed at handwheel		Respective maximum torque at handwheel
SVC/SVM 05.1	150 rpm	6 Nm
SVC/SVM 07.1	150 rpm	10 Nm
SVC/SVM 07.1	150 rpm	10 Nm

**CAUTION:** The handwheel shaft may only be subjected to slight axial and radial load to avoid damage to the seal.