

Z111.482/ Z110.333/ Z110.332


RETROFIT KIT-LC-SEPARATELY-SxC (local controls on wall bracket)

References for assembly

These instructions apply to the following retrofit kits:

Kit	Article no.	Description
1	Z111.482	Retrofit kit incl. 2 mating plugs (without connecting cable)
2	Z110.333	Retrofit kit incl. ready-made cable set (connecting cable with mating plug)
3	Z110.332	Retrofit kit without mating connector, without connecting cable


Scope of delivery

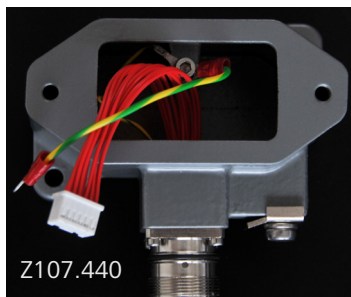

Scope of:

Kit	Pcs.	Article no.	Description
1,2,3	1	Z107.440	Wall bracket with plug socket
1,2,3	1	Z107.441	Cover with plug socket
1	2	K013.288	Mating plug 19-pole with contact sockets - (for cable diameters between 7 and 14 mm)
2	1	Z139.733	Cable set ready-made

Actuator with local controls on wall bracket

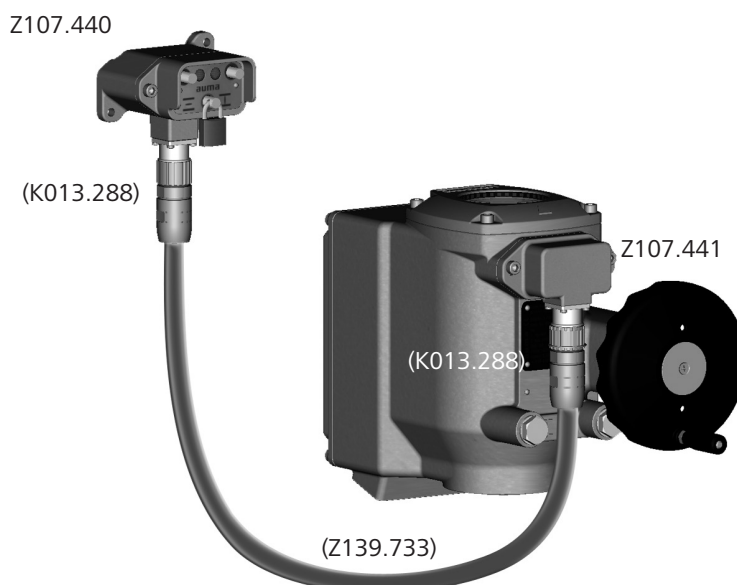

Refer to page 2 for References for assembly



References for assembly

References for assembly

Please always heed safety and warning instructions of operation instructions throughout all steps.

Assembly steps:

1. Replace local controls mounted to the actuator (spare parts list no. 002.0-1) by cover (Z107.441) included in retrofit kit.

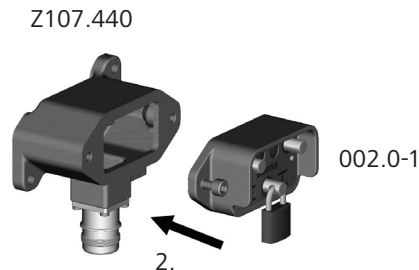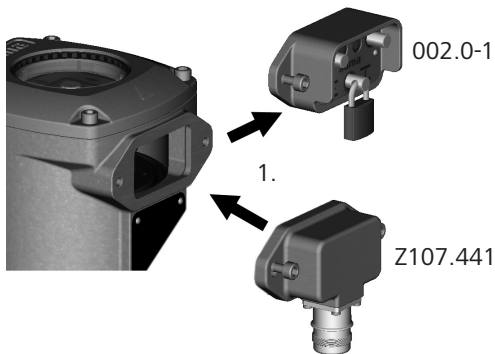

2. Fit local controls (spare parts list no. 002.0-1) to wall bracket (Z107.440).
3. Connect local controls on wall bracket using the connecting cable with connectors.
(Refer to illustration "Arrangement with local controls mounted on wall bracket".)

Notes on assembly of mating plug/connecting cable:

If AUMA ready-made cable set (Z139.733) is not used for connection, the following points must be observed for assembly of mating plugs/connecting cable:

- Only use screened connecting cable with a maximum cable diameter of 14 mm.
- Use suitable crimping tools for connection the cables to the plugs.
- Wire both mating plugs 1:1.
(The following 13 contacts are required: 1 – 3, 8 – 11, 12 for PE and 13 – 17)

Reference documents

- Operation instructions pertaining to actuator:
("Local controls on wall bracket" and "Spare parts list" chapters)
- Technical data

Reference documents are available on our website: www.auma.com