

NOTICE**Special coupling with keyway and retaining ring**

Coupling cannot be removed after assembly.

→ Ensure that coupling used matches the valve shaft.

When mounting the gearbox onto the coupling, check that the retaining ring is truly engaged to ensure perfect incorporation between coupling and gearbox segment.