 


**Spare parts list**

**avuma®**

## GSTI 25.1 – GSTI 40.1

**for use in nuclear power plants  
(Inside/Outside Containment)**



## Spare parts list Multi-turn gearboxes for use in nuclear power plants (Inside/Outside Containment)

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type
001.0	Housing	Sub-assembly
002.0	Bearing flange	Sub-assembly
003.0	Hollow shaft	Sub-assembly
004.0	Intermediate stage	Sub-assembly
004.1	Intermediate wheel	Sub-assembly
005.0	Input shaft	Sub-assembly
010.0-1	Bearing cover for second shaft end	Sub-assembly
010.0-2	Protection cover for second shaft end	
511.0	Threaded plug	Sub-assembly
512.0	Input mounting flange	Sub-assembly
514.0	Output drive type A (without stem nut)	Sub-assembly
514.1	Axial needle roller bearing	Sub-assembly
520.2	Axial cylinder roller bearing (as of GSTI 35.1)	Sub-assembly
535.1	Snap ring	
539.0	Screw plug	Sub-assembly
542.0	Handwheel with ball handle	Sub-assembly
549.0	Output drive type B3/E/B4	Sub-assembly
549.1	Output drive sleeve B3/E/B4	
551.1	Parallel key	
568.1	Stem protection tube (without cap)	
568.2	Protective cap for stem protection tube	
568.3	V-seal	
575.1	Stem nut for output drive type A	
595.0	Screw kit for manual gearbox	Sub-assembly
620.1	Eyebolt	
S1	Seal kit	Set