

**Spare parts list**

**uma®**

**Part-turn actuators**

**SGC 04.1 – SGC 10.1**

**SGCR 04.1 – SGCR 10.1**

Diagram illustrating the exploded view of the Auma part-turn actuator assembly, showing various components and their part numbers:

- 500.0
- 542.0
- 542.1
- 507.0
- 501.0
- 503.0
- 504.0
- 502.0
- 505.0
- 506.0
- 611.0
- 058.0
- 545.0-3
- 002.3-2
- 002.0-2
- 002.3-1
- 002.0-1
- 539.0
- 525.0
- 541.0
- 545.0-2
- 545.0-1
- 545.0-3
- 545.0-2
- 545.0-3
- 541.0
- 587.0
- 002.3-1
- 002.0-1
- 541.0
- 545.0-3

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type
002.0-1	Local controls	Sub-assembly
002.0-2	Cover (for version without local controls)	Sub-assembly
002.0-3	Cover with socket for connecting separately mounted local controls	Sub-assembly
002.3-1	Board for local controls 002.0-1	Sub-assembly
002.3-2	Board in connecting cover 002.0-3	Sub-assembly
058.0	Wire for protective earth	
500.0	Cover	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly
503.0	Socket for control	Sub-assembly
504.0	Socket for motor	Sub-assembly
505.0	Pin for controls	Sub-assembly
506.0	Pin for motor	Sub-assembly
507.0	Cover for electrical connection	Sub-assembly
525.0	Coupling	Sub-assembly
539.0	Screw plug for end stop	
541.0	Earth connection	Sub-assembly
542.0	Handwheel with ball handle	Sub-assembly
542.1	Ball handle	Sub-assembly
545.0-1	Protective metal cap (with cord)	Sub-assembly
545.0-2	Protective plastic cap (without cord)	Sub-assembly
545.0-3	Mating plug	Sub-assembly
587.0	Wall bracket	
611.0	Cover	Sub-assembly
S1	Seal kit, small	Set