

Y007.597/003/en  
Issue 1.23

## Spare parts list Part-turn gearboxes

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

| Ref. no. | Designation                   | Type         |
|----------|-------------------------------|--------------|
| 001.0    | Housing                       | Sub-assembly |
| 001.1    | Setting screw for end stop    | Sub-assembly |
| 512.0    | Input mounting flange         | Sub-assembly |
| 518.0    | Housing cover                 | Sub-assembly |
| 519.1    | Worm wheel                    |              |
| 520.1    | Worm                          | Sub-assembly |
| 520.2    | Axial cylinder roller bearing |              |
| 524.0    | Pointer cover                 | Sub-assembly |
| 525.0    | Coupling                      | Sub-assembly |
| 630.1    | Shaft                         | Sub-assembly |
| 631.0    | Planet carrier                |              |
| 632.0    | Internal geared wheel         |              |
| S1       | Seal kit                      | Set          |