



Multi-turn actuators

SAV 07.2 – SAV 16.2

SARV 07.2 – SARV 16.2

Control unit: electronic (MWG)

with actuator controls

ACV 01.2 Non-Intrusive

Control

Parallel

Profibus DP

Profinet

Modbus RTU

Modbus TCP/IP

Foundation Fieldbus

HART

→ EtherNet/IP



Read operation instructions first.

- Observe safety instructions.
- These operation instructions are part of the product.
- Store operation instructions during product life.
- Pass on instructions to any subsequent user or owner of the product.

Target group:

This document contains information for assembly, commissioning and maintenance staff.

Reference documents:

- Manual (device integration) of actuator controls ACV 01.2 EtherNet/IP

Reference documents are available on the Internet at: <http://www.auma.com>.

Table of contents	Page
1. Safety instructions.....	5
1.1. Prerequisites for the safe handling of the product	5
1.2. Range of application	5
1.3. Warnings and notes	6
1.4. References and symbols	6
2. Short description.....	8
3. Name plate.....	10
4. Transport, storage and packaging.....	13
4.1. Transport	13
4.2. Storage	14
5. Assembly.....	16
5.1. Mounting position	16
5.2. Handwheel fitting	16
5.3. Mount actuator to valve	16
5.3.1. Overview of output drive types	17
5.3.2. Output drive type A	17
5.3.2.1. Multi-turn actuator with output drive type A: mount	18
5.3.2.2. Stem nut for output drive type A: finish machining	20
5.3.3. Output drive types B/C/D and E	21
5.3.3.1. Multi-turn actuator with output drive type B: mount	22
5.4. Accessories for assembly	23
5.4.1. Stem protection tube for rising valve stem	23
5.5. Mounting positions of local controls	24
5.5.1. Mounting positions: modify	24
6. Electrical connection.....	25
6.1. Basic information	25
6.2. Overview of AUMA electrical connections	27
6.3. SJ electrical connection (AUMA plug/socket connector)	28
6.3.1. Terminal compartment (for mains connection): open	29
6.3.2. Cable connection	30
6.3.3. Terminal compartment (for mains connection): close	32
6.3.4. Fieldbus terminal compartment: open	33

6.3.5.	Industrial Ethernet cable: connect	33
6.3.6.	Fieldbus terminal compartment: close	34
6.4.	Compact version SF electrical connection for EtherNet/IP	35
6.4.1.	Terminal compartment (for mains connection): open	36
6.4.2.	Cable connection	37
6.4.3.	Terminal compartment (for mains connection): close	38
6.4.4.	Industrial Ethernet cable: connect	39
6.5.	Accessories for electrical connection	39
6.5.1.	Parking frame	39
6.5.2.	DS intermediate frame for double sealing	40
6.5.3.	External earth connection	40
7.	Operation.....	41
7.1.	Manual operation	41
7.1.1.	Manual valve operation	41
7.2.	Motor operation	42
7.2.1.	Operating the actuator from local controls	42
7.2.2.	Actuator operation from remote	43
7.3.	Menu navigation via push buttons (for settings and indications)	43
7.3.1.	Menu layout and navigation	44
7.4.	User level, password	45
7.4.1.	Password entry	46
7.4.2.	Password change	46
7.4.3.	Timeout for incorrect password entry	47
7.5.	Language in the display	47
7.5.1.	Language change	47
8.	Indications.....	49
8.1.	Indications during commissioning	49
8.2.	Indications in the display	49
8.2.1.	Feedback signals from actuator and valve	50
8.2.2.	Status indications according to AUMA classification	52
8.2.3.	Status indications according to NAMUR recommendation	53
8.3.	Indication lights of local controls	55
8.4.	Optional indications	56
8.4.1.	Mechanical position indication (self-adjusting)	56
8.4.2.	Mechanical position indication via indicator mark (not self-adjusting)	56
9.	Signals (output signals).....	57
9.1.	Status signals via output contacts (digital outputs)	57
9.1.1.	Assignment of outputs	57
9.1.2.	Coding the outputs	57
9.2.	Analogue signals (analogue outputs)	57
10.	Commissioning (basic settings).....	58
10.1.	Type of seating: set	58
10.2.	Torque switching: set	59
10.3.	Limit switching: set	61
10.4.	Output speed (internal): set	63
10.5.	Test run	64
10.5.1.	Direction of rotation at mechanical position indicator: check	64
10.5.2.	Direction of rotation at hollow shaft/stem: check	66
10.5.3.	Limit switching: check	66

11.	Commissioning (settings/options in the actuator).....	68
11.1.	Switch compartment: open/close	68
11.2.	Mechanical position indicator (self-adjusting)	69
11.2.1.	Mechanical position indicator: set	69
11.2.2.	Gear stage of the reduction gearing: test/set	70
11.3.	Mechanical position indication via indicator mark (not self-adjusting)	71
11.3.1.	Mechanical position indicator: set	71
11.3.2.	Gear stage of the reduction gearing: test/set	71
12.	Corrective action.....	74
12.1.	Faults during commissioning	74
12.2.	Fault indications and warning indications	74
12.3.	Fuses	77
12.3.1.	Fuses within the actuator controls	77
12.3.2.	Motor protection (thermal monitoring)	78
13.	Servicing and maintenance.....	79
13.1.	Preventive measures for servicing and safe operation	79
13.2.	Maintenance	80
13.3.	Disposal and recycling	80
14.	Technical data.....	81
14.1.	Technical data Multi-turn actuators	81
14.2.	Technical data Actuator controls	83
14.3.	Tightening torques for screws	86
15.	Spare parts.....	87
15.1.	Multi-turn actuators SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2	87
15.2.	ACV 01.2 actuator controls with SJ electrical connection	89
15.3.	ACV 01.2 actuator controls with SF electrical connection	91
	Index.....	93

1. Safety instructions

1.1. Prerequisites for the safe handling of the product

Standards/directives	<p>The end user or the contractor must ensure that all legal requirements, directives, guidelines, national regulations and recommendations with respect to assembly, electrical connection, commissioning and operation are met at the place of installation.</p> <p>They include among others:</p> <ul style="list-style-type: none"> • Applicable configuration guidelines for network applications.
Safety instructions/warnings	<p>All personnel working with this device must be familiar with the safety and warning instructions in this manual and observe the instructions given. Safety instructions and warning signs on the device must be observed to avoid personal injury or property damage.</p>
Qualification of staff	<p>Assembly, electrical connection, commissioning, operation, and maintenance must be carried out by suitably qualified personnel authorised by the end user or contractor of the plant only.</p> <p>Prior to working on this product, the staff must have thoroughly read and understood these instructions and, furthermore, know and observe officially recognised rules regarding occupational health and safety.</p>
Commissioning	<p>Prior to commissioning, imperatively check that all settings meet the requirements of the application. Incorrect settings might present a danger to the application, e.g. cause damage to the valve or the installation. The manufacturer will not be held liable for any consequential damage. Such risk lies entirely with the user.</p>
Operation	<p>Prerequisites for safe and smooth operation:</p> <ul style="list-style-type: none"> • Correct transport, proper storage, mounting and installation, as well as careful commissioning. • Only operate the device if it is in perfect condition while observing these instructions. • Immediately report any faults and damage and allow for corrective measures. • Observe recognised rules for occupational health and safety. • Observe national regulations. • During operation, the housing warms up and surface temperatures > 60 °C may occur. To prevent possible burns, we recommend checking the surface temperature prior to working on the device using an appropriate thermometer and wearing protective gloves.
Protective measures	<p>The end user or the contractor are responsible for implementing required protective measures on site, such as enclosures, barriers, or personal protective equipment for the staff.</p>
Maintenance	<p>To ensure safe device operation, the maintenance instructions included in this manual must be observed.</p> <p>Any device modification requires prior written consent of the manufacturer.</p>

1.2. Range of application

AUMA multi-turn actuators SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2 are designed for the operation of industrial valves, e.g. globe valves, gate valves, butterfly valves, and ball valves.

Other applications require explicit (written) confirmation by the manufacturer.

The following applications are not permitted, e.g.:

- Industrial trucks according to EN ISO 3691
- Lifting appliances according to EN 14502
- Passenger lifts according to DIN 15306 and 15309

- Service lifts according to EN 81-1/A1
- Escalators
- Continuous duty
- Buried service
- Continuous underwater use (observe enclosure protection)
- Potentially explosive areas
- Radiation exposed areas in nuclear power plants

No liability can be assumed for inappropriate or unintended use.

Observance of these operation instructions is considered as part of the device's designated use.

Information These operation instructions are only valid for the "clockwise closing" standard version, i.e. driven shaft turns clockwise to close the valve.

1.3. Warnings and notes

The following warnings draw special attention to safety-relevant procedures in these operation instructions, each marked by the appropriate signal word (DANGER, WARNING, CAUTION, NOTICE).



Indicates an imminently hazardous situation with a high level of risk. Failure to observe this warning results in death or serious injury.




Indicates a potentially hazardous situation with a medium level of risk. Failure to observe this warning could result in death or serious injury.



Indicates a potentially hazardous situation with a low level of risk. Failure to observe this warning could result in minor or moderate injury. May also be used with property damage.



Potentially hazardous situation. Failure to observe this warning could result in property damage. Is not used for personal injury.

Safety alert symbol  warns of a potential personal injury hazard.

The signal word (here: DANGER) indicates the level of hazard.

1.4. References and symbols

The following references and symbols are used in these instructions:

Information The term **Information** preceding the text indicates important notes and information.



Symbol for CLOSED (valve closed)



Symbol for OPEN (valve open)



Via the menu to parameter

Describes the menu path to the parameter. When using the push buttons of local controls, the required parameter can be quickly found on the display. Display texts are shaded in grey: **Display**.



Result of a process step

Describes the result of a preceding process step.

Warning signs at the device

The following warning signs can be attached to the device.



General warning sign

General warning of a danger zone.



Hot surface

Warning of hot surfaces, e.g. possibly caused by high ambient temperatures or strong direct sunlight.



Electrical voltage


Hazardous voltage! Warning of electric shock. At some devices, the warning sign additionally includes a time interval, e.g. 30 s. Once power supply is switched off, you will have to wait for the indicated period. Only then may the device be opened.

2. Short description

Multi-turn actuator Definition in compliance with EN 15714-2/EN ISO 5210:

A multi-turn actuator is an actuator which transmits torque to a valve for at least one full revolution.

AUMA multi-turn actuator Figure 1: AUMA SAV 10.2 multi-turn actuator

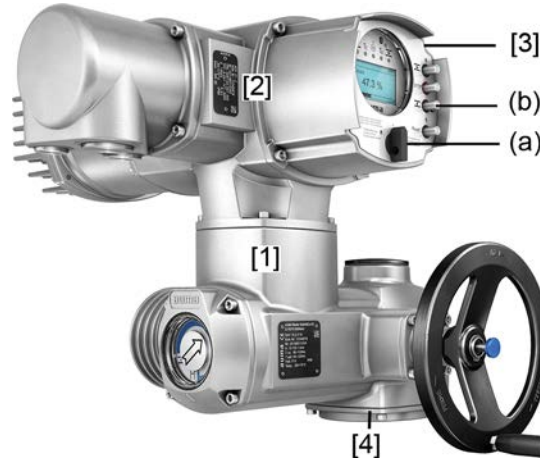

- [1] Multi-turn actuator with motor and handwheel
- [2] Actuator controls
- [3] Local controls with display, (a) selector switch and (b) push button
- [4] Valve connection, e.g. output drive type A

AUMA multi-turn actuators SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2 are driven by an electric motor. A handwheel is available for setting and emergency operation.

Switching off in end positions may be either by limit or torque seating.

Actuator controls are required to operate or process the actuator signals.

For non-intrusive version (control unit: electromechanical version), limit and torque setting is made via switches within the actuator.

For non-intrusive version (control unit: electronic version), limit and torque setting is made via the actuator controls, neither actuator nor the actuator controls housing have to be opened. For this purpose, the actuator is equipped with an MWG (magnetic limit and torque transmitter), also capable of supplying analogue torque feedback signals/torque indication and analogue position feedback signals/position indication at the actuator controls output.

In combination with output drive type A, the actuator is capable of withstanding thrust.

For variable speed multi-turn actuators SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2, the actuator speed is modified by means of a frequency converter in the actuator controls.

Actuator controls The actuator controls ACV 01.2 may be mounted directly to the actuator or separately on a wall bracket.

The actuator can be operated via the push buttons on the local controls of the actuator controls or settings can be made in the actuator controls menu. The display shows information on the actuator as well as the menu settings.

The functions of the actuator controls include standard valve control in OPEN-CLOSE duty, positioning, process control, logging of operating data, diagnostic functions right through control via various interfaces (e.g. fieldbus, Ethernet and HART).

App and software

Using the **AUMA CDT** software for Windows-based computers (notebooks or tablets) and the **AUMA Assistant App**, actuator data can be uploaded and read, settings can be modified and stored. The connection between computer and AUMA actuator is established wireless via Bluetooth interface. With the **AUMA Cloud**, we provide

an interactive platform to collect and assess e.g. detailed device data of all actuators within a plant.

Figure 2: Communication via Bluetooth



AUMA CDT



AUMA CDT is a user-friendly setting and operation program for AUMA actuators. AUMA CDT software can be downloaded free of charge from our website www.auma.com.

AUMA Cloud



The AUMA Cloud is the driving element of the digital AUMA world, acting as interactive platform for efficient maintenance of AUMA actuators at moderate cost. The AUMA Cloud collects all device data of all actuators within one site and provides a clear overview at a glance. Detailed analysis provides valuable information on potential maintenance requirements. Additional functions foster smooth asset management.

AUMA Assistant App



The AUMA Assistant App enables remote setting and remote diagnostics of AUMA actuators via Bluetooth using either smartphone or tablet.


The AUMA Assistant App can be downloaded free of charge from the Play Store (Android) or App Store (iOS).

Figure 3: Link to AUMA Assistant App



3. Name plate

Figure 4: Arrangement of name plates

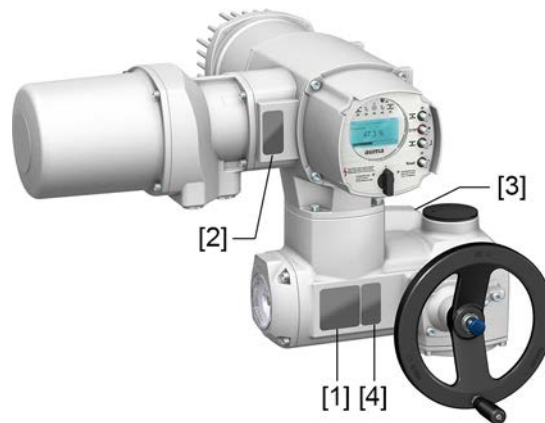

- [1] Actuator name plate
- [2] Actuator controls name plate
- [3] Motor name plate
- [4] Additional plate, e.g. KKS plate (Power Plant Classification System)

Actuator name plate

Figure 5: Actuator name plate (example)




(= manufacturer logo); **auma** (= CE mark)CE

- [1] Name of manufacturer
- [2] Address of manufacturer
- [3] **Type designation**
- [4] **Order number**
- [5] **Serial number**
- [6] Speed range
- [7] Torque range in direction CLOSE
- [8] Torque range in direction OPEN
- [9] Type of lubricant
- [10] Permissible ambient temperature
- [11] Can be assigned as an option upon customer request
- [12] Enclosure protection
- [13] Data Matrix code

Actuator controls name plate

Figure 6: Name plate for actuator controls (example)

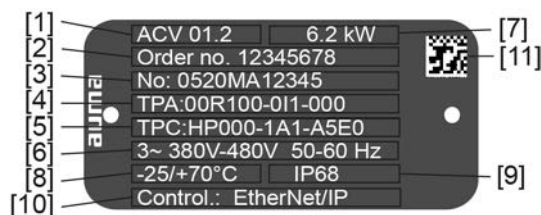


uma (= manufacturer logo)

- [1] **Type designation**
- [2] **Order number**
- [3] **Serial number**
- [4] **Actuator terminal plan**
- [5] Actuator controls terminal plan
- [6] Mains/voltage range/frequency range
- [7] **Rated power of the ACV**
- [8] Permissible ambient temperature
- [9] Enclosure protection
- [10] **Control**
- [11] Data Matrix code


Motor name plate

Figure 7: Motor name plate (example)

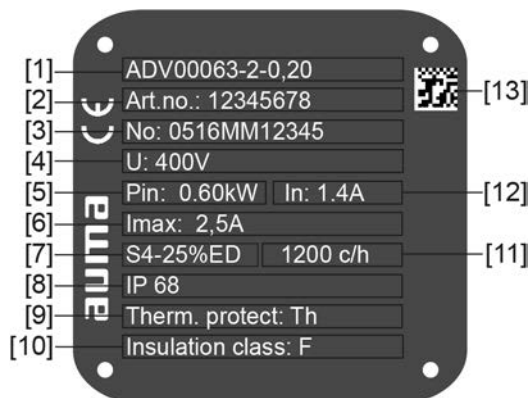

uma (= manufacturer logo); **CE** (= CE mark)

- [1] **Motor type**
- [2] **Motor article number**
- [3] **Serial number**
- [4] **Rated voltage**
- [5] **Consumed rated power**
- [6] **Maximum current**
- [7] **Type of duty**
- [8] **Enclosure protection**
- [9] **Motor protection (temperature protection)**
- [10] **Insulation class**
- [11] **Perm. number of starts (for SARV)**
- [12] **Rated current**
- [13] **Data Matrix code**

Descriptions referring to name plate indications**Type designation** Figure 8: Type designation (example)

1. Type and size of actuator
2. Flange size

Type and size

These instructions apply to the following devices types and sizes:

- SA..... = Type = Multi-turn actuators for open-close duty
.....V... = Variable speed
Sizes and generation: 07.2, 07.6, 10.2, 14.2, 14.6, 16.2
- SAR..... = Type = Multi-turn actuators for modulating duty
.....V.... = Variable speed
Sizes and generation: 07.2, 07.6, 10.2, 14.2, 14.6, 16.2
- AC..... = Type = AC actuator controls
.....V... = For variable speed actuators
Size and generation: 01.2

Order number The product can be identified using this number and the technical data as well as order-related data pertaining to the device can be requested.

Please always state this number for any product inquiries.

On the Internet at <http://www.auma.com> > Service & Support > myAUMA, we offer a service allowing authorised users to download order-related documents such as wiring diagrams and technical data (both in German and English), inspection certificate and the operation instructions when entering the order number.

Actuator serial number

Table 1:

Description of serial number (example of 0520MD12345)			
05	20	MD12345	
05			Positions 1+2: Assembly in week = week 05
	20		Positions 3+4: Year of manufacture = 2020
		MD12345	Internal number for unambiguous product identification

Actuator terminal plan Position 9 after **TPA**: Position transmitter version

I = MWG (magnetic limit and torque transmitter)

Control

Table 2:

Control examples (indications on actuator controls name plate)	
Input signal	Description
EtherNet/IP	Control via EtherNet/IP interface
EtherNet/IP/24 V DC	Control via EtherNet/IP interface and control voltage for OPEN - CLOSE control via digital inputs (OPEN, STOP, CLOSE)

Data Matrix code When registered as authorised user, you may use our **AUMA Assistant App** to scan the Data Matrix code and directly access the order-related product documents without having to enter order number or serial number.

Figure 9: Link to AUMA Assistant App:



For further Service & Support, Software/Apps/... refer to www.auma.com

4. Transport, storage and packaging

4.1. Transport

For transport to place of installation, use sturdy packaging.

⚠ DANGER

Suspended load!

Death or serious injury.

- Do NOT stand below suspended load.
- Attach ropes or hooks for the purpose of lifting by hoist only to housing and NOT to handwheel.
- Actuators mounted on valves: Attach ropes or hooks for the purpose of lifting by hoist to valve and NOT to actuator.
- Actuators mounted to gearboxes: Attach ropes or hooks for the purpose of lifting by hoist only to the gearbox using eyebolts and NOT to the actuator.
- Actuators mounted to controls: Attach ropes or hooks for the purpose of lifting by hoist only to the actuator and NOT to the controls.
- Respect total weight of combination (actuator, actuator controls, gearbox, valve)
- Secure load against falling down, sliding or tilting.
- Perform lift trial at low height to eliminate any potential danger e.g. by tilting.

Figure 10: Example: Lifting the actuator



NOTICE

Delicate cooling fins, risk of damage!

During transport or assembly without the supplied transport protection, the cooling fins may either break or bend if they hit other objects during inappropriate transport.

- During transport and installation, leave the supplied cooling fin transport protection on the cooling fins.

Table 3:

Weights for multi-turn actuators SAV 07.2 – SAV 16.2 / SARV 07.2 – SARV 16.2 with 3-phase AC motors		
Type designation Actuator	Motor type ¹⁾	approx. [kg]
		Weight ²⁾
SAV 07.2/ SARV 07.2	AD...	20
SAV 07.6/ SARV 07.6	AD...	21
SAV 10.2/ SARV 10.2	AD...	25
SAV 14.2/ SARV 14.2	AD...	48
SAV 14.6/ SARV 14.6	AD...	53
SAV 16.2/ SARV 16.2	AD...	79

1) Refer to motor name plate

2) Indicated weight includes AUMA NORM multi-turn actuator with 3-phase AC motor, electrical connection in standard version, output drive type B1 and handwheel. For other output drive types, heed additional weights.

Table 4:

Weights for output drive type		
Type designation	Flange size	[kg]
A 07.2	F07	1.1
	F10	1.3
A 10.2	F10	2.8
A 14.2	F14	6.8
A 16.2	F16	11.7

Table 5:

Weights for output drive type		
Type designation	Flange size	[kg]
AF 07.2	F10	5.2
AF 07.6	F10	5.2
AF 10.2	F10	5.5
AF 14.2	F14	13.7
AF 16.2	F16	23

4.2. Storage

NOTICE

Danger of corrosion due to inappropriate storage!

- Store in a well-ventilated, dry room.
- Protect against floor dampness by storage on a shelf or on a wooden pallet.
- Cover to protect against dust and dirt.
- Apply suitable corrosion protection agent to uncoated surfaces.

NOTICE

Risk of damage due to excessively low temperatures!

- Actuator controls may only be stored permanently down to –30 °C.
- On request, actuators controls may be transported in specific cases and for short duration at temperatures down to –60 °C.

Long-term storage For long-term storage (more than 6 months), observe the following points:

1. Prior to storage:
Protect uncoated surfaces, in particular the output drive parts and mounting surface, with long-term corrosion protection agent.
2. At an interval of approx. 6 months:
Check for corrosion. If first signs of corrosion show, apply new corrosion protection.

5. Assembly

5.1. Mounting position


When using grease as lubricant, the product described herein can be operated in any mounting position.

When using oil instead of grease within the actuator gear housing, perpendicular mounting position is specified whereby the flange is pointing downward. The type of lubricant used is indicated on the actuator name plate (short designation **F**...= grease; **O**...= oil).

5.2. Handwheel fitting

To avoid transport damage, handwheels are supplied separately as appropriate. In this instance, the handwheel must be mounted prior to commissioning.

Figure 11: Handwheel

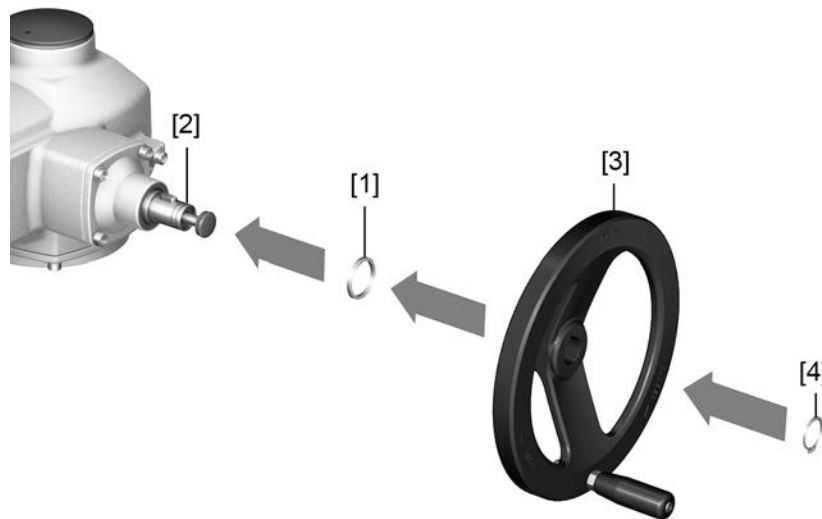

- [1] Spacer
- [2] Input shaft
- [3] Handwheel
- [4] Retaining ring

How to proceed

1. If required, fit spacer [1] on input shaft [2].
2. Slip handwheel [3] onto input shaft.
3. Secure handwheel [3] with retaining ring [4].

Information: The retaining ring [4] (together with these operation instructions) is stored in a weatherproof bag, which is attached to the device prior to delivery.

5.3. Mount actuator to valve

NOTICE

Corrosion due to damage to paint finish and condensation!

- Touch up damage to paint finish after work on the device.
- After mounting, connect the device immediately to electrical mains to ensure that heater minimises condensation.


5.3.1. Overview of output drive types

Table 6: Overview on output drive types

Valve attachment	Application	Description	Assembly
A	<ul style="list-style-type: none"> for rising, non-rotating valve stem capable of withstanding thrust not appropriate for radial forces 	⇒ page 17, Output drive type A	⇒ page 18, Multi-turn actuator with output drive type A: mount
B, B1 – B4 C D E	<ul style="list-style-type: none"> for rotating, non-rising valve stem not capable of withstanding thrust 	⇒ page 21, Output drive types B/C/D and E	⇒ page 22, Multi-turn actuator with output drive type B: mount

5.3.2. Output drive type A

Figure 12: Output drive type A

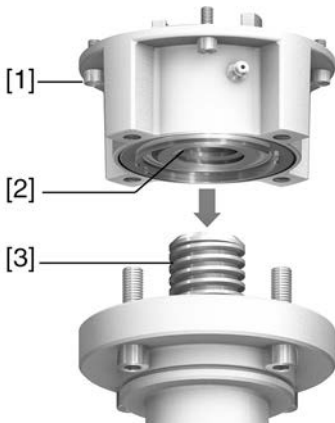

- [1] Output mounting flange
- [2] Stem nut
- [3] Valve stem

Short description
Output drive type A consisting of output mounting flange [1] with axial bearing stem nut [2]. The stem nut transmits the torque from the actuator hollow shaft to the valve stem [3]. Output drive type A can withstand thrusts.

To adapt the actuators to available output drive types A with flanges F10 and F14 (year of manufacture 2009 and earlier), an adapter is required. The adapter can be ordered from AUMA.

5.3.2.1. Multi-turn actuator with output drive type A: mount

1. If output drive type A is already mounted to the multi-turn actuator: Loosen screws [3] and remove output drive type A [2].

Figure 13: Multi-turn actuator with output drive type A




- [1] Multi-turn actuator
- [2] Output drive type A, from left to right:
with finish-machined, unbored and pilot bore stem nut
- [3] Screws to multi-turn actuator

Information For an unbored or pilot bore stem nut, the stem nut must be finish machined prior to mounting valve stem and prior to performing the following steps. ➔ [page 20, Stem nut for output drive type A: finish machining](#)


2. Apply a small quantity of grease to the valve stem.
3. Place output drive type A [2] on valve stem and turn until it is [4] flush on the valve flange.
4. Turn output drive type A [2] until alignment of the fixing holes.
5. Fasten screws [5] between valve and output drive type A [2] without completely tightening them.

Figure 14:

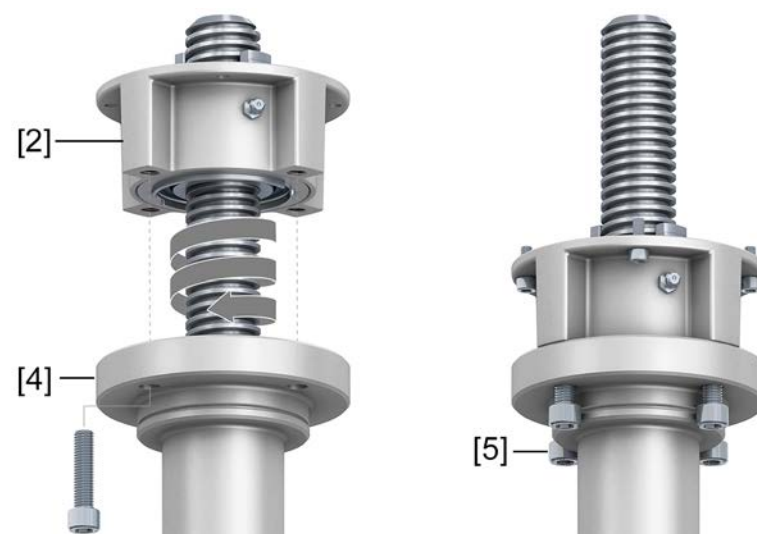

6. Fit multi-turn actuator on the valve stem so that the stem nut dogs engage into the output drive sleeve.

Figure 15:

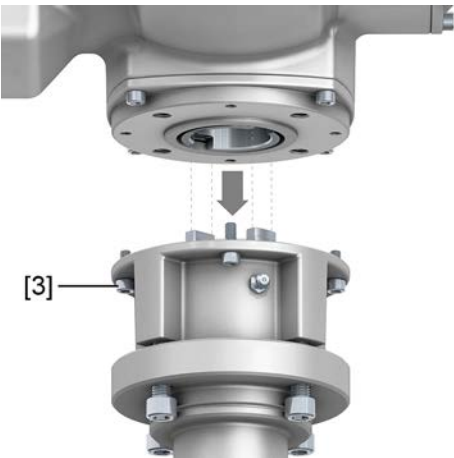


- ➔ The flanges are flush with each other if properly engaged.
7. Adjust multi-turn actuator until alignment of the fixing holes.
8. Fasten multi-turn actuator with screws [3].
9. Fasten screws [3] crosswise with a torque according to table.

Table 7:

Tightening torques for screws	
Threads	Tightening torque [Nm]
	Strength class A2-80/A4-80
M8	24
M10	48
M16	200
M20	392

10. Turn multi-turn actuator with handwheel in direction OPEN until valve flange [4] and output drive type A [2] are firmly placed together.

Figure 16:

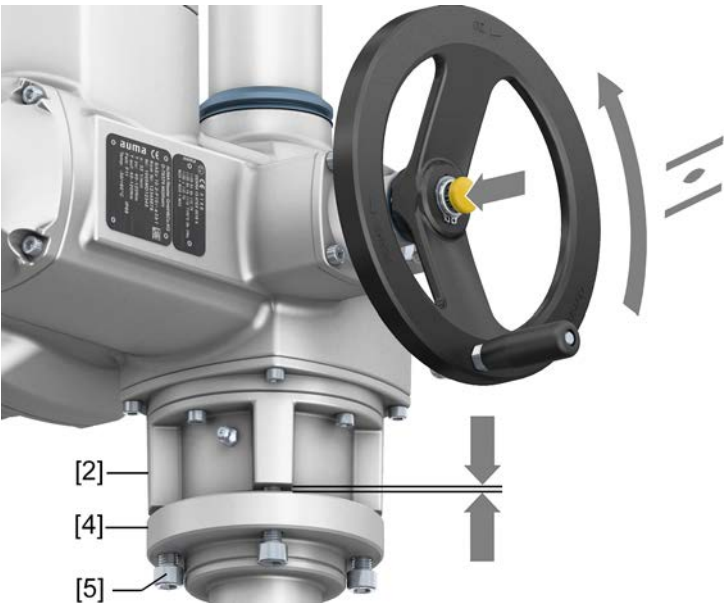


11. Tighten screws [5] between valve and output drive type A crosswise applying a torque according to table.

5.3.2.2. Stem nut for output drive type A: finish machining

This working step is only required if stem nut is supplied unbored or with pilot bore.

Information For exact product version, please refer to the order-related technical data sheet or the AUMA Assistant App.

Figure 17: Output drive type A

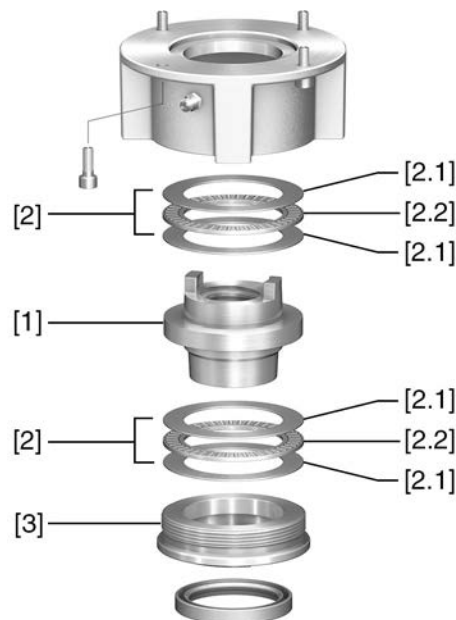


- [1] Stem nut
- [2] Axial needle roller bearing
- [2.1] Axial bearing washer
- [2.2] Axial needle roller and cage assembly
- [3] Spigot ring

- Procedure**
1. Remove spigot ring [3] from output drive.
 2. Remove stem nut [1] together with axial needle roller bearings [2].
 3. Remove axial bearing washers [2.1] and axial needle roller and cage assemblies [2.2] from stem nut [1].
 4. Drill and bore stem nut [1] and cut thread.
 5. Clean the machined stem nut [1].
 6. Apply sufficient Lithium soap EP multi-purpose grease to axial needle roller and cage assemblies [2.2] and axial bearing washers [2.1], ensuring that all hollow spaces are filled with grease.
 7. Place greased axial needle roller and cage assemblies [2.2] and axial bearing washers [2.1] onto stem nut [1].
 8. Re-insert stem nut [1] with axial needle roller bearings [2] into output drive.
 9. Screw in spigot ring [3] until it is firm against the shoulder.

5.3.3. Output drive types B/C/D and E

Figure 18: Mounting principle

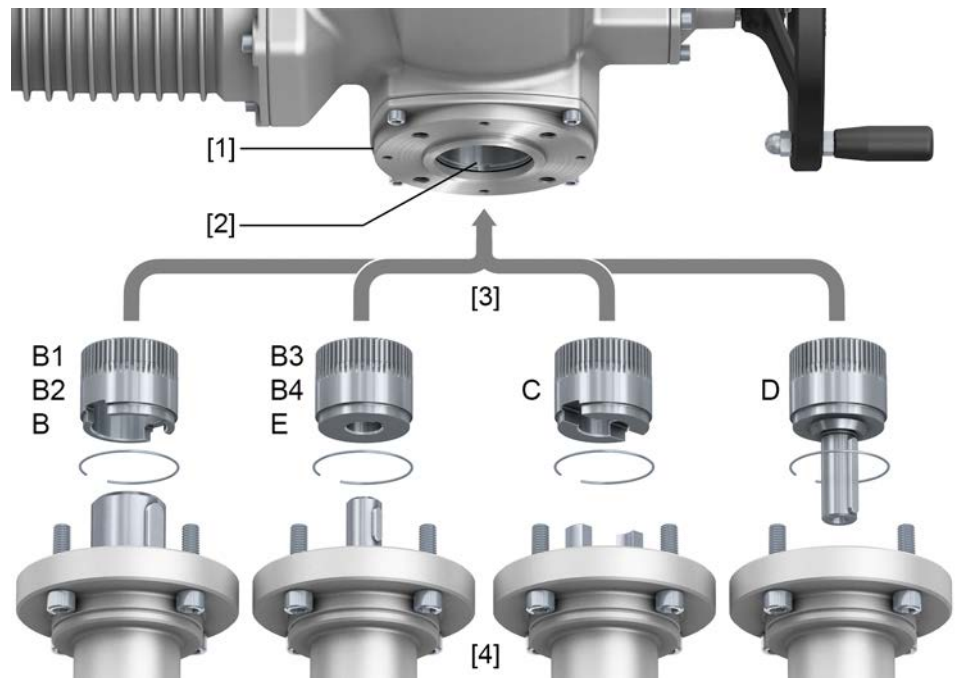

- [1] Flange multi-turn actuator (e.g. F07)
- [2] Hollow shaft
- [3] Output drive sleeve (illustration examples)
- [4] Gearbox/valve shaft

Short description

Connection between hollow shaft and valve or gearbox via output drive sleeve fixed to the hollow shaft of the multi-turn actuator via retaining ring.

When exchanging the output drive sleeve, later retrofitting to a different output drive type is possible


- Output drive type B/E:
Output drive sleeve with bore according to DIN 3210
- Output drive types B1/B3:
Output drive sleeve with bore according to EN ISO 5210
- Output drive types B2/B4:
Output drive sleeve with bore according to customer order
B4 including special bores like bores without keyway, square bore, hexagon bore, internal splines
- Output drive type C:
Output drive sleeve with dog coupling according to EN ISO 5210 or DIN 3338
- Output drive type D:
Shaft end with key according to EN ISO 5210 or DIN 3210

Information

Spigot at valve flanges should be loose fit.

5.3.3.1. Multi-turn actuator with output drive type B: mount

Figure 19: Mounting output drive types B

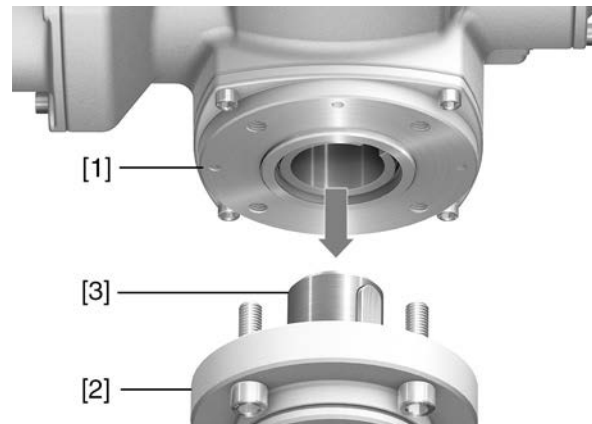

- [1] Multi-turn actuator
- [2] Valve/gearbox
- [3] Valve/gearbox shaft

- Procedure**
1. Check if mounting flanges fit together.
 2. Check if output drive of multi-turn actuator [1] matches the output drive of valve/gearbox or valve/gearbox valve shaft [2/3].
 3. Apply a small quantity of grease to the valve or gearbox shaft [3].
 4. Place multi-turn actuator [1] and ensure that the spigot fits uniformly in the recess and that the mounting faces are in complete contact.
 5. Fasten multi-turn actuator with screws according to table.
Information: We recommend applying liquid thread sealing material to the screws to avoid contact corrosion.
 6. Fasten screws crosswise to a torque according to table.


Table 8:

Tightening torques for screws	
Threads	Tightening torque [Nm]
	Strength class A2-80/A4-80
M8	24
M10	48
M16	200
M20	392

5.4. Accessories for assembly

5.4.1. Stem protection tube for rising valve stem

Figure 20: Assembly of the stem protection tube

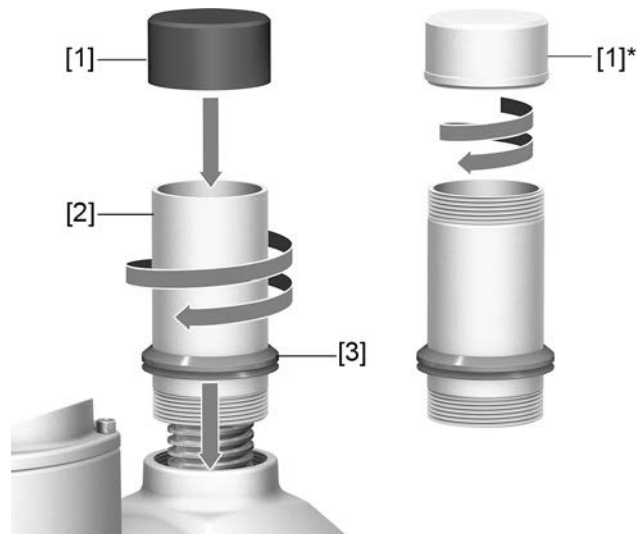


- [1] Protective cap for stem protection tube (fitted)
- [1]* Option: Protective cap made of steel (screwed)
- [2] Stem protection tube
- [3] V-seal

Procedure

1. Seal all threads with hemp, Teflon tape, sealing agent or thread sealing material.
2. Screw stem protection tube [2] into thread and tighten it firmly.

Information: For stem protection tubes made of two or more segments, all parts have to be thoroughly screwed together.

Figure 21: Protection tube made of segments with threaded sleeves (>900 mm)

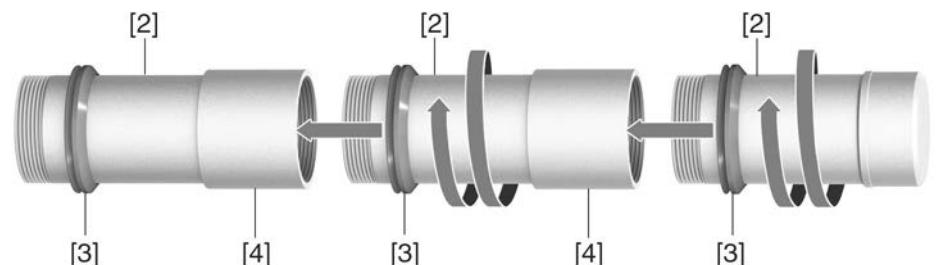

- [2] Segment of stem protection tube
 - [3] V-seal
 - [4] Threaded sleeve
3. Push down the sealing ring [3] onto the housing.
Information: For mounting segments, push down seals of segments down to the sleeve (connecting piece).
 4. Check whether protective cap [1] for stem protection tube is available, in perfect condition and tightly placed on or screwed to the tube.

NOTICE

Risk of bending or oscillation of protection tubes exceeding a length of 2 m!

Risk of damage at stem and/or protection tube.

→ Secure protection tubes exceeding 2 m by an appropriate support.

5.5. Mounting positions of local controls

Figure 22: Mounting positions



The mounting position of the local controls is implemented according to the order. If, after mounting the actuator to the valve or the gearbox on site, the local controls are in an unfavourable position, the mounting position can be changed at a later date. Four mounting positions shifted by respectively 90° are possible (by maximum 180° into one direction).

5.5.1. Mounting positions: modify



Electric shock due to presence of hazardous voltage!

Failure to observe this warning results in death or serious injury.

- Disconnect device from the mains before opening.
- Wait for 30 seconds after power cut-off prior to opening the housing.



Electrostatic discharge ESD!

Risk of damage to electronic components.

- Earth both operators and devices.

1. Loosen screws and remove the local controls.
2. Check whether O-ring is in good condition, correctly insert O-ring.
3. Turn local controls into new position and re-place.



Cable damage due to twisting or pinching!

Risk of functional failures.

- Turn local controls by a maximum of 180°.
- Carefully assemble local controls to avoid pinching the cables.

4. Fasten screws evenly crosswise.

6. Electrical connection

6.1. Basic information

WARNING

Electric shock due to presence of hazardous voltage!

Failure to observe this warning can result in death, serious injury, or property damage.


- The electrical connection must be carried out exclusively by suitably qualified personnel.
- Prior to connection, observe basic information contained in this chapter.
- After connection but prior to applying the voltage, observe the <Commissioning> and <Test run> chapters.

NOTICE

Risk of overheating during operation with mounted transport protection!

- Prior to connection, remove transport protection from cooling fins.

Figure 23: Remove transport protection

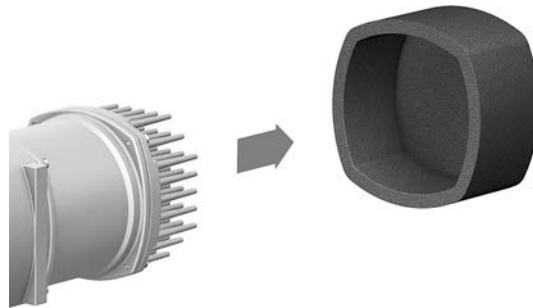

Wiring diagram/terminal plan

The pertaining wiring diagram/terminal plan (in German or English) is attached to the device in a weather-proof bag, together with these operation instructions. It can also be requested from AUMA (state order number, refer to name plate) or downloaded directly from the Internet (<http://www.auma.com>).


Permissible networks (supply networks)

The actuators are suitable for use in TN and TT networks with directly grounded star point for nominal voltages up to maximum 480 V AC. Use in IT network is permissible for nominal voltages up to maximum 480 V AC. For IT network, a suitable, approved insulation monitor measuring the pulse code is required.

Current type, mains voltage, mains frequency

Type of current, mains voltage and mains frequency must match the data on the actuator controls and motor name plates. Also refer to chapter <Identification>/<Name plate>.

Figure 24: Actuator controls name plate (example)

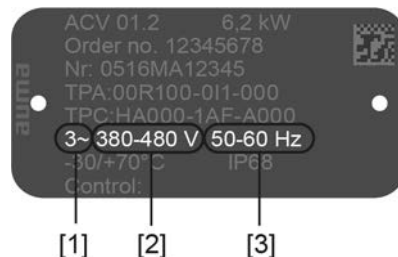

- [1] Type of current
- [2] Mains voltage (voltage range)
- [3] Mains frequency (frequency range)

Protection and sizing on site

For short-circuit protection and for disconnecting the actuator from the mains, fuses and disconnect switches have to be provided by the customer.

Table 9:

Protection on site				
Multi-turn actuator	3-phase AC motor 380 V – 480 V/50 Hz – 60 Hz ¹⁾			Fuse ²⁾
Type	Consumed rated power P_{IN} [kW]	Rated current I_N [A]	Max. current I_{max} [A]	Blow characteristics: Time-delay (gG) [A]
SAV 07.2	0.6	1.3	1.8	6
SARV 07.2	0.6	1.4	2.5	6
	0.8	1.7	3.5	6
SAV 07.6	0.9	2.0	2.8	6
SARV 07.6	1.2	2.6	4.3	6
	1.3	3.0	4.8	6
SAV 10.2	1.3	2.8	4.4	6
SARV 10.2	1.8	4.0	6.9	10
	2.0	4.5	7.4	10
SAV 14.2	1.7	3.8	6.1	10
SARV 14.2	3.1	6.8	11.0	16
	3.9	8.7	15.2	20
SAV 14.6	2.9	6.5	9.9	16
SARV 14.6	5.0	11.1	17.9	20
	6.2	13.7	22.6	25
SAV 16.2	5.3	10.9	17.2	20
SARV 16.2				

- 1) For motor with different current type/mains voltage/mains frequency (refer to motor name plate), select fuse in accordance with electrical data sheet.
- 2) The actuators are suitable for use in current circuits with a maximum short-circuit 1-phase AC current value of 5,000 A root-mean-square (R.M.S). The output data of the fuses to be provided on site must not exceed the following values: 32 A/600 V at a maximum mains short circuit current of 5,000 A AC.

Consider the max. current (I_{max}) (refer to motor name plate or electrical data sheet) when selecting the circuit breaker.

We recommend refraining from using residual current devices (RCD). However, if an RCD is used within the mains, the residual current device must be of type B. DC current may be present within the PE conductor.

For actuator controls equipped with a heating system and external electronics power supply, the fuses for the heating system have to be provided by the customer (refer to wiring diagram F4 ext.)

Table 10:

Fuse for heating system		
Designation in wiring diagram = F4 ext.		
External power supply	115 V AC	230 V AC
Fuse	2 A T	1 A T

If actuator controls are mounted separately from actuator (actuator controls on wall bracket): Consider length and cross section of connecting cable when defining the protection required.

Potential of customer connections Safety standards

Refer to Technical data for options of isolated potentials.

Safety measures and safety equipment must comply with the respectively valid national on site specifications. All externally connected devices shall comply with the relevant safety standards applicable for the place of installation.

Connecting cables, cable glands, reducers, blanking plugs

- We recommend using connecting cables and connecting terminals according to rated current (I_N) (refer to motor name plate or electrical data sheet).
- For device insulation, appropriate (voltage-proof) cables must be used. Specify cables for the highest occurring rated voltage.
- To avoid contact corrosion, we recommend the use of sealing agents for cable glands and blanking plugs made of metal.
- Use connecting cable with appropriate minimum rated temperature.
- For connecting cables exposed to UV radiation (outdoor installation), use UV resistant cables.
- For the connection of position transmitters, screened cables must be used.

Cable installation in accordance with EMC

NOTICE

Network cables are sensitive to interference. Motor cables are interference sources.

This product potentially causes high frequency interference!

→ The measures eliminating interference described hereafter must be observed for cable installation in accordance with EMC.

- Use shielded power cable and earth shield at both ends.
- Lay cables being susceptible to interference or sources of interference at the highest possible distance from each other.
- The interference immunity of network cables increases if the cables are laid close to the earth potential.
- If possible, avoid laying long cables and make sure that they are installed in areas being subject to low interference.
- Avoid parallel paths with little cable distance of cables being either susceptible to interference or interference sources.
- In a residential environment, this product may cause radio interference, in which case supplementary mitigation measures might be required.

Network cables

This device is equipped with a network port.

Table 11:

Cable recommendation	
Only network cables suitable for Industrial Ethernet are to be used.	
Minimum requirement	Cat.5e for fixed installation, 2x2xAWG22 structure
Cable recommendation	Cat.6e for fixed installation, 2x2xAWG22 structure

Prior to installation, please note:

- Install network cables at a distance of minimum 20 cm to other cables.
- If possible, network cables should be laid in a separate, conductive, and earthed cable tray.
- Ensure absence of equipotential earth bonding differences between the individual devices within the network (perform an equipotential earth bonding).
- Do not use network hubs.



Table 12: Transmission rate/cable length for star topology or point-to-point wiring

Baud rate (kbit/s)	Maximum cable length: between two network participants for copper cables
10/100 Mbits/s	100 m

6.2. Overview of AUMA electrical connections


The section below provides an overview of the different electrical connections described in the chapters to follow.

Table 13: Versions of the AUMA plug/socket connector

Electrical connection	Figure	Properties	For description and assembly refer to chapter
SJ		Plug/socket connector with enlarged terminal compartment	⇒ page 28, SJ electrical connection (AUMA plug/socket connector)
Compact version SF		Plug/socket connector with removable cover and enlarged terminal compartment for EtherNet/IP	⇒ page 35, Compact version SF electrical connection for EtherNet/IP

6.3. SJ electrical connection (AUMA plug/socket connector)

Figure 25: SJ electrical connection

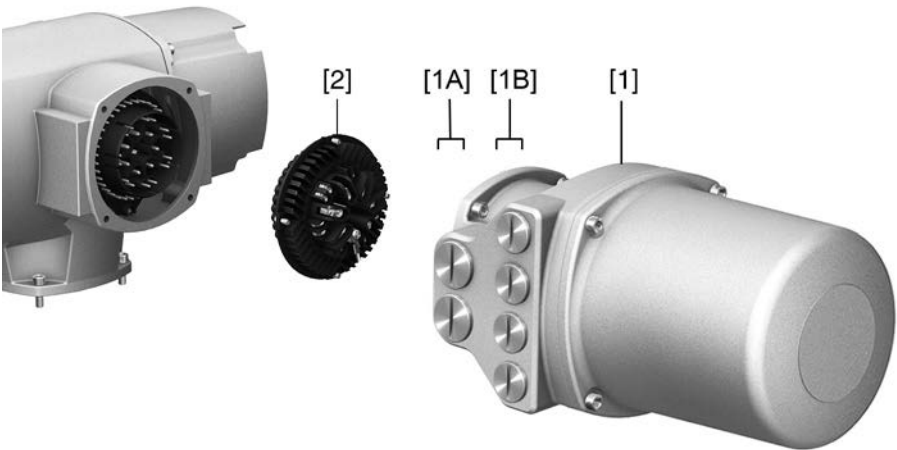

- [1] Terminal compartment (in cover)
- [1A] Cable entries for mains connection (power and control contacts)
- [1B] Cable entries for fieldbus cables
- [2] Socket carrier with screw-type terminals

Short description Plug-in electrical connection with screw-type terminals for power and control contacts. Control contacts also available as crimp-type connection as an option.

SJ version . For power and control cable connection, remove the AUMA plug/socket connector and the socket carrier from terminal compartment. Removing the cover is sufficient for connecting the fieldbus cables.


Technical data

Table 14:

Electrical connection via AUMA plug/socket connector		
	Power contacts	Control contacts
No. of contacts max.	6 (3 equipped) + protective earth conductor (PE)	50 pins/sockets
Designation	U1, V1, W1, U2, V2, W2, PE	1 to 50
Connection voltage max.	750 V	250 V
Rated current max.	25 A	16 A
Type of customer connection	Screw connection	Screw connection, crimp-type (option)
Connection diameter max.	6 mm ² (flexible) 10 mm ² (solid)	2.5 mm ² (flexible or solid)

6.3.1. Terminal compartment (for mains connection): open

Figure 26: Open mains terminal compartment

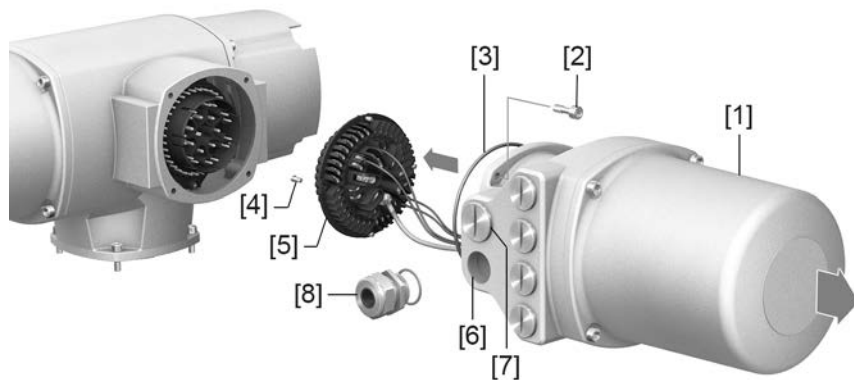

- [1] Connection housing
- [2] Screws for frame
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable entries for mains connection (power and control contacts)
- [7] Blanking plug
- [8] Cable gland (not included in delivery)



Electric shock due to presence of hazardous voltage!


Failure to observe this warning results in death or serious injury.

- Disconnect device from the mains before opening.
- Wait for 30 seconds after power cut-off prior to opening the housing.

1. Loosen screws [2] and remove connection housing [1].
2. Loosen screws [4] and remove socket carrier [5] from connection housing [1].

3. Insert cable glands [8] suitable for connecting cables.
- ➔ The enclosure protection IP... stated on the name plate is only ensured if suitable cable glands are used.

Figure 27: Example: Name plate for enclosure protection IP68

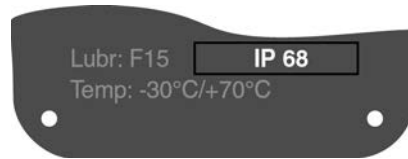

4. Seal unused cable entries [6] with suitable blanking plugs [7].

Information Fieldbus connection can be accessed separately from the mains connection (refer to <Fieldbus terminal compartment: open>).

6.3.2. Cable connection

Table 15:

Terminal cross sections and terminal tightening torques		
Designation	Terminal cross sections	Tightening torques
Power contacts (U1, V1, W1, U2, V2, W2)	1.0 – 6 mm ² (flexible) 1.5 – 10 mm ² (solid)	1.2 – 1.5 Nm
Protective earth connection ⚡ (PE)	1.0 – 6 mm ² (flexible) with ring lugs 1.5 – 10 mm ² (solid) with loops	1.2 – 2.2 Nm
Control contacts (1 to 50)	0.25 – 2.5 mm ² (flexible) 0.34 – 2.5 mm ² (solid)	0.5 – 0.7 Nm

1. Remove cable sheathing.
2. Insert the wires into the cable glands.
3. Fasten cable glands with the specified torque to ensure required enclosure protection.
4. Strip wires.
 - ➔ Controls approx. 6 mm, motor approx. 10 mm
5. For flexible cables: Use wire end sleeves according to DIN 46228.
6. Connect cables according to order-related wiring diagram.




In case of a fault: Hazardous voltage while protective earth conductor is NOT connected!

Risk of electric shock.

- Connect all protective earth conductors.
- Connect PE connection to external protective earth conductor of connecting cables.
- Start running the device only after having connected the protective earth conductor.

7. Tighten PE conductors firmly to PE connection using ring lugs (flexible cables) or loops (solid cables).

Figure 28: Protective earthing

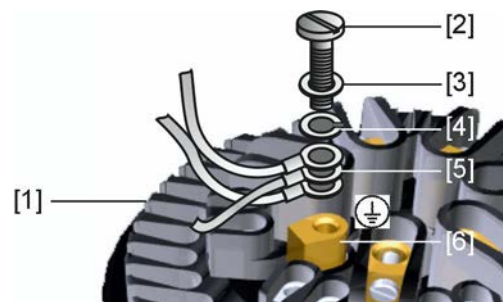


- [1] Socket carrier
- [2] Screw
- [3] Washer
- [4] Lock washer
- [5] Protective earth with ring lugs/loops
- [6] Protective earthing, symbol: ⊕

8. For shielded cables: Link the cable shield end via the cable gland to the housing (earthing).

6.3.3. Terminal compartment (for mains connection): close

Figure 29: Close mains terminal compartment

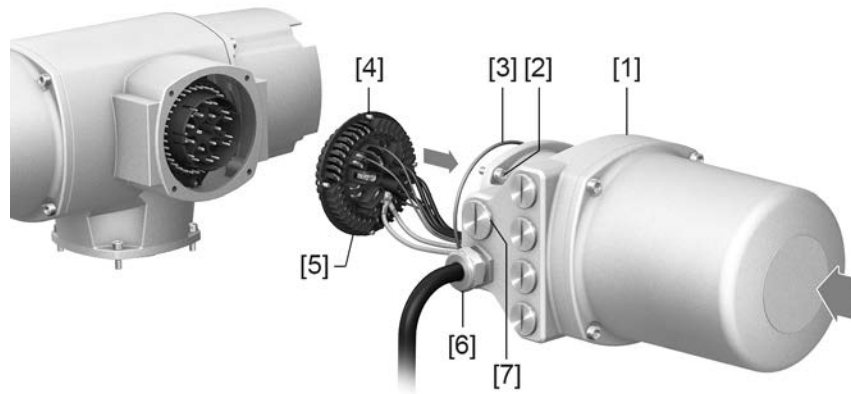

- [1] Connection housing
- [2] Screws for frame
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable gland (not included in delivery)
- [7] Blanking plug

**Short-circuit due to pinching of cables!**


Risk of electric shock and functional failures.

→ Carefully fit socket carrier to avoid pinching the cables.

1. Insert the socket carrier [5] into the connection housing [1] and fasten with screws [4].
2. Clean sealing faces of connection housing [1] and housing.
3. Check whether O-ring [3] is in good condition, replace if damaged.
4. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the O-ring and insert it correctly.
5. Fit connection housing [1] and fasten screws [2] evenly crosswise.
6. Fasten cable glands and blanking plugs applying the specified torque to ensure the required enclosure protection.

6.3.4. Fieldbus terminal compartment: open

Figure 30: Open cover to fieldbus terminal compartment

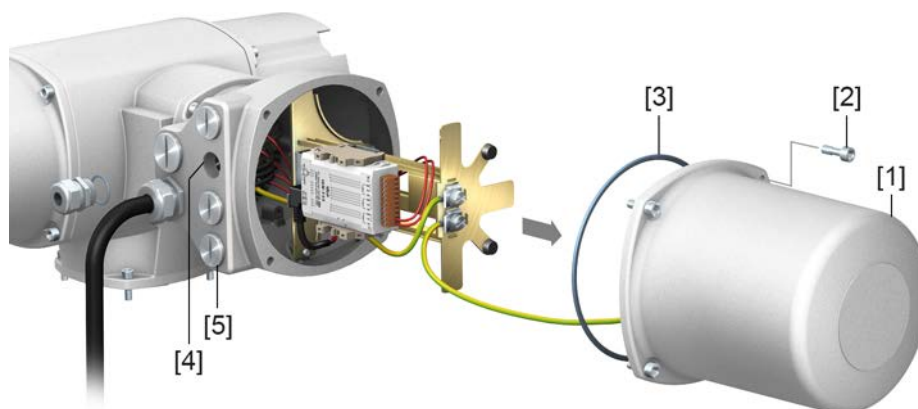

- [1] Cover (fieldbus terminal compartment)
- [2] Screws for cover
- [3] O-ring
- [4] Cable entries for fieldbus cables
- [5] Blanking plug

For connecting the Industrial Ethernet cable within the AUMA plug/socket connector, a field-assembled Ethernet connector is used. When removing the cover [1], the connection board is easily accessible.

⚠ DANGER

Electric shock due to presence of hazardous voltage!

Failure to observe this warning results in death or serious injury.

- Disconnect device from the mains before opening.
- Wait for 30 seconds after power cut-off prior to opening the housing.

NOTICE


Electrostatic discharge ESD!

Risk of damage to electronic components.

- Earth both operators and devices.

1. Loosen screws [2] and remove cover [1].
2. Insert cable glands suitable for fieldbus cables.
- ➔ The enclosure protection IP... stated on the name plate is only ensured if suitable cable glands are used.

Figure 31: Example: Name plate for enclosure protection IP68

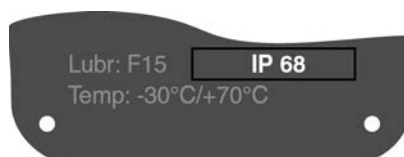


3. Seal unused cable entries with suitable plugs.

6.3.5. Industrial Ethernet cable: connect

Information This description applies to the connection for Ethernet cables equipped with RJ-45 connectors.


Figure 32: EtherNet/IP module

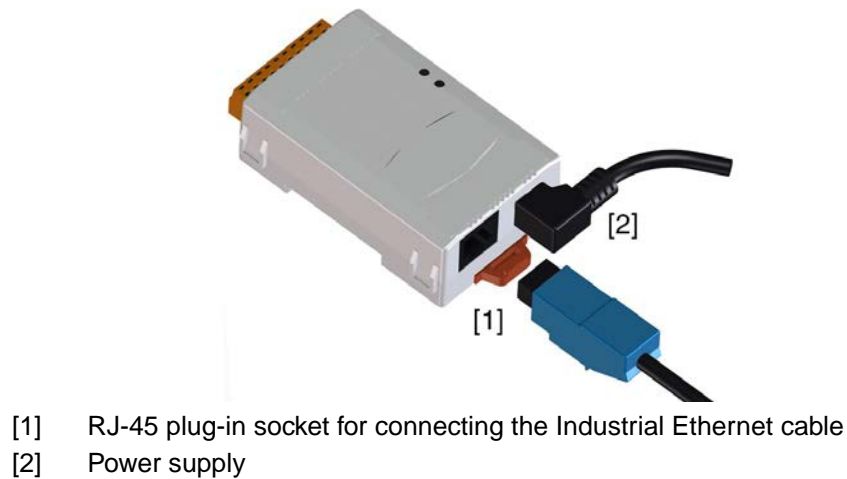**Cable connection**

1. For connecting cables to RJ-45 connectors, proceed in compliance with the connector manufacturer specifications.
 ➔ When using the RJ-45 connector supplied by AUMA, please heed the assembly instructions provided.
2. Connect RJ-45 connector to port for Ethernet cable [1].

6.3.6. Fieldbus terminal compartment: close


Figure 33: Close fieldbus terminal compartment

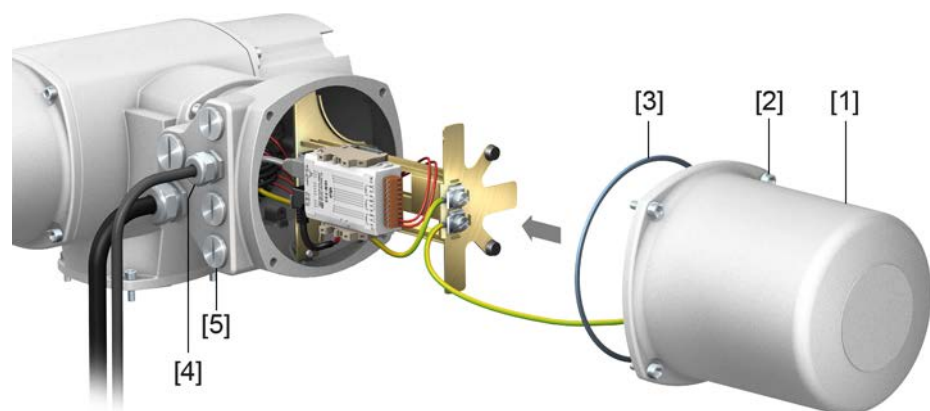

1. Clean sealing faces of cover [1] and housing.
2. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the sealing faces.
3. Check whether O-ring [3] is in good condition, correctly insert O-ring.
4. Fit cover [1] and fasten screws [2] evenly crosswise.
5. Fasten cable glands and blanking plugs applying the specified torque to ensure the required enclosure protection.

6.4. Compact version SF electrical connection for EtherNet/IP

Figure 34: SF electrical connection

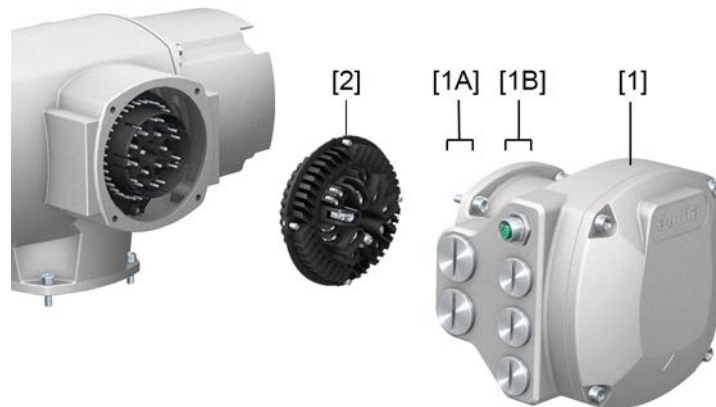

- [1] Terminal compartment (with cover)
- [1A] Cable entries for mains connection (pins for motors and pins for controls)
- [1B] Cable entries for network cables
- [2] Socket carrier with screw-type terminals

Short description

Plug-in electrical connection with screw-type terminals for pins for motors and pins for controls.

SF version. For power and control cable connection, remove the AUMA plug/socket connector and the socket carrier from terminal compartment. The cover does not have to be removed for connecting network cables.


Technical data

Table 16:

Electrical connection via AUMA plug/socket connector		
	Power contacts	Control contacts
No. of contacts max.	6 (3 equipped) + protective earth conductor (PE)	50 pins/sockets
Designation	U1, V1, W1, U2, V2, W2, PE	1 to 50
Connection voltage max.	750 V	250 V
Rated current max.	25 A	16 A
Type of customer connection	Screw connection	Screw connection, crimp-type (option)
Connection diameter max.	6 mm ² (flexible) 10 mm ² (solid)	2.5 mm ² (flexible or solid)

6.4.1. Terminal compartment (for mains connection): open

Figure 35: Open mains terminal compartment

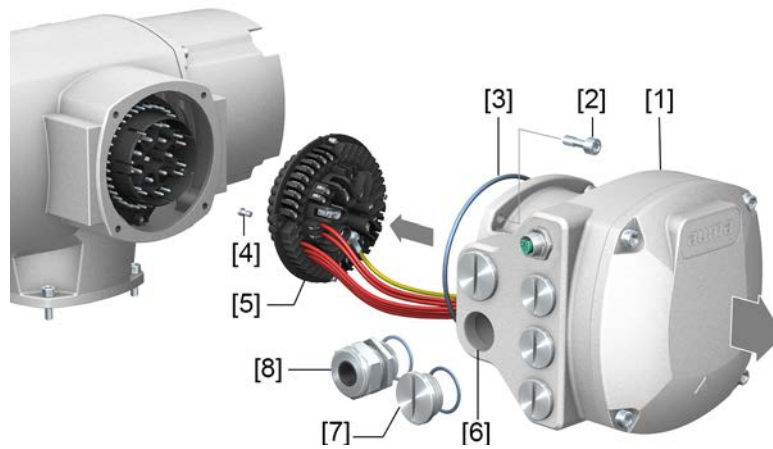

- [1] Connection housing
- [2] Screws for frame
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable entries for mains connection (pins for motors and pins for controls)
- [7] Blanking plug
- [8] Cable gland (not included in scope of delivery)


⚠ DANGER**Electric shock due to presence of hazardous voltage!**

Failure to observe this warning results in death or serious injury.

- Disconnect device from the mains before opening.
- Wait for 30 seconds after power cut-off prior to opening the housing.

1. Loosen screws [2] and remove connection housing [1].
2. Loosen screws [4] and remove socket carrier [5] from connection housing [1].
3. Insert cable glands [8] suitable for connecting cables.
- ➔ The enclosure protection IP... stated on the name plate is only ensured if suitable cable glands are used.

Figure 36: Example: Name plate for enclosure protection IP68

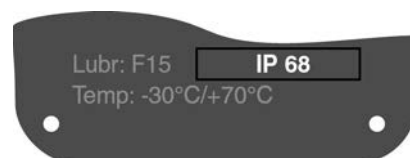

4. Seal unused cable entries [6] with suitable blanking plugs [7].

Information

Fieldbus connection can be accessed separately from the mains connection (refer to <Fieldbus terminal compartment: open>).

6.4.2. Cable connection

Table 17:

Terminal cross sections and terminal tightening torques		
Designation	Terminal cross sections	Tightening torques
Power contacts (U1, V1, W1, U2, V2, W2)	1.0 – 6 mm ² (flexible) 1.5 – 10 mm ² (solid)	1.2 – 1.5 Nm
Protective earth connection \oplus (PE)	1.0 – 6 mm ² (flexible) with ring lugs 1.5 – 10 mm ² (solid) with loops	1.2 – 2.2 Nm
Control contacts (1 to 50)	0.25 – 2.5 mm ² (flexible) 0.34 – 2.5 mm ² (solid)	0.5 – 0.7 Nm

1. Remove cable sheathing.
2. Insert the wires into the cable glands.
3. Fasten cable glands with the specified torque to ensure required enclosure protection.
4. Strip wires.
→ Controls approx. 6 mm, motor approx. 10 mm
5. For flexible cables: Use wire end sleeves according to DIN 46228.
6. Connect cables according to order-related wiring diagram.




In case of a fault: Hazardous voltage while protective earth conductor is NOT connected!

Risk of electric shock.

- Connect all protective earth conductors.
- Connect PE connection to external protective earth conductor of connecting cables.
- Start running the device only after having connected the protective earth conductor.

7. Tighten PE conductors firmly to PE connection using ring lugs (flexible cables) or loops (solid cables).

Figure 37: PE connection

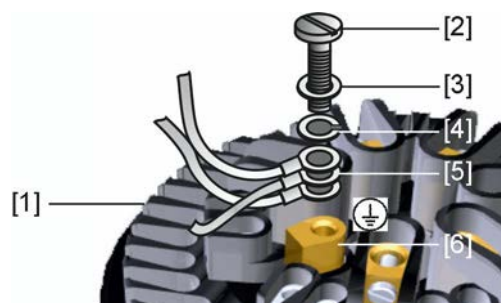


- [1] Socket carrier
- [2] Screw
- [3] Washer
- [4] Lock washer
- [5] PE conduction with ring lugs/loops
- [6] Protective earth connection, symbol: \oplus

8. For shielded cables: Link the cable shield end via the cable gland to the housing (earthing).

6.4.3. Terminal compartment (for mains connection): close

Figure 38: Close mains terminal compartment

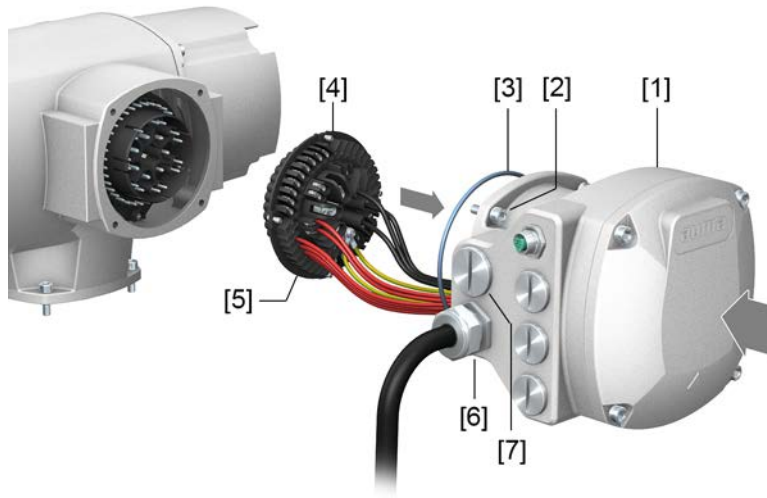

- [1] Connection housing
- [2] Screws for connection housing
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable gland (not included in scope of delivery)
- [7] Blanking plug


**Short-circuit due to pinching of cables!**

Risk of electric shock and functional failures.

→ Carefully fit socket carrier to avoid pinching the cables.

1. Insert the socket carrier [5] into the connection housing [1] and fasten with screws [4].
2. Clean sealing faces of connection housing [1] and housing.
3. Check whether O-ring [3] is in good condition, replace if damaged.
4. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the O-ring and insert it correctly.
5. Fit connection housing [1] and fasten screws [2] evenly crosswise.
6. Fasten cable glands and blanking plugs applying the specified torque to ensure the required enclosure protection.

6.4.4. Industrial Ethernet cable: connect

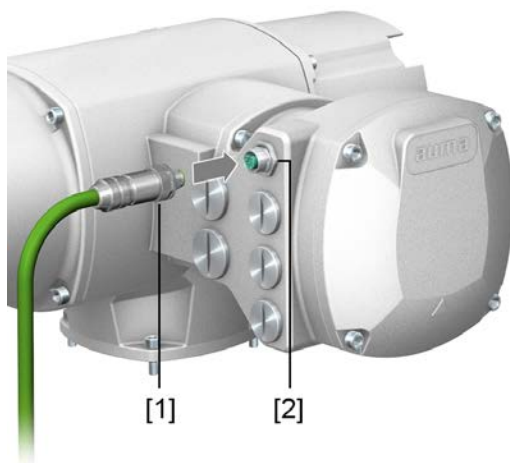


- [1] M12 connector for connecting the Industrial Ethernet cable
- [2] M12 port

- Cable connection**
1. Remove protective cap.
 2. Connect M12 connector [1] to M12 port for Ethernet cable [2].
 3. Tighten cap nut.

6.5. Accessories for electrical connection

6.5.1. Parking frame


Figure 39: Parking frame, example with AUMA plug/socket connector and cover

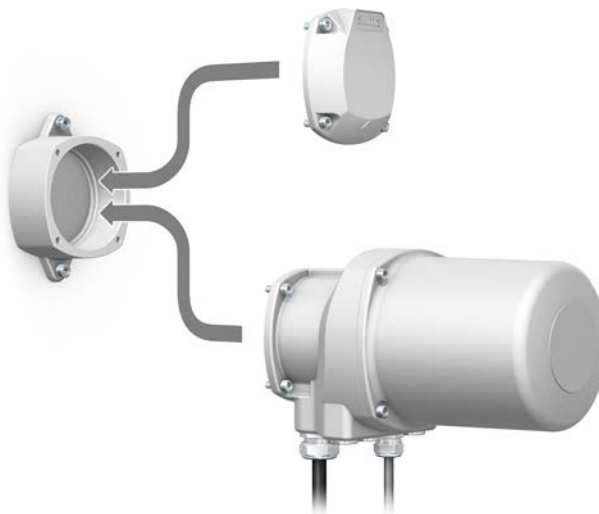

- Application** Parking frame for safe storage of a disconnected plug or cover.
For protection against touching the bare contacts and against environmental influences.

6.5.2. DS intermediate frame for double sealing

Figure 40: Electrical connection with DS intermediate frame

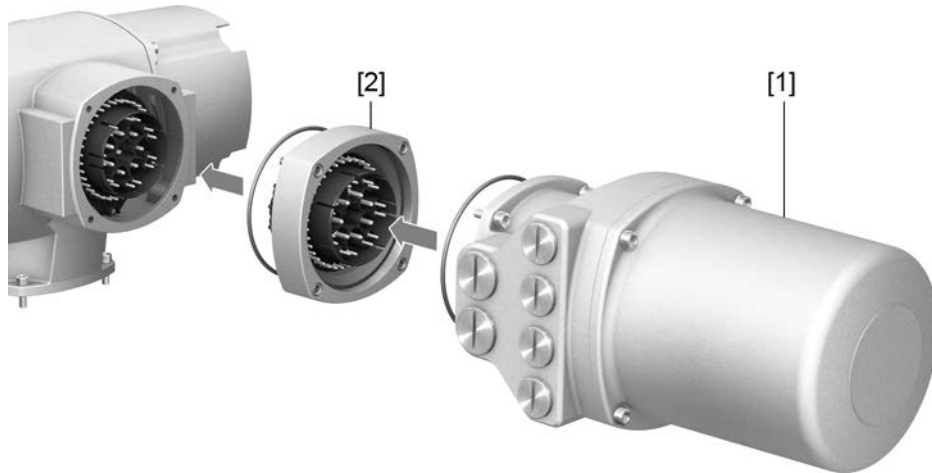

- [1] Electrical connection
[2] DS intermediate frame

Application When removing the electrical connection or due to leaky cable glands, there is a potential risk of ingress of dust and water into the housing. This is prevented effectively by inserting the double sealed intermediate frame [2] between the plug/socket connector [1] and the housing of the device. The enclosure protection of the device (IP68) will not be affected, even if the electrical connection [1] is removed.

6.5.3. External earth connection

Figure 41: Earth connection for multi-turn actuator



Application External earth connection (U-bracket) for connection to equipotential compensation.

Table 18:

Terminal cross sections and earth connection tightening torques		
Conductor type	Terminal cross sections	Tightening torques
Solid wire and stranded	2.5 mm ² to 6 mm ²	3 – 4 Nm
Fine stranded	1.5 mm ² to 4 mm ²	3 – 4 Nm

For fine stranded (flexible) wires, connection is made via cable lugs/ring terminals. When connecting two individual wires with a U-bracket, cross sections have to be identical.

7. Operation

7.1. Manual operation

For purposes of setting and commissioning, in case of motor or power failure, the actuator may be operated manually. Manual operation is engaged by an internal change-over mechanism.

Manual operation is automatically disengaged when motor is started again. The handwheel does not rotate during motor operation.

7.1.1. Manual valve operation




Damage at the manual change-over mechanism/motor coupling due to faulty operation!

- Engage manual operation only during motor standstill.
- Do NOT use extensions as lever for operation.

Procedure



1. Press push button.
2. Turn handwheel in desired direction.

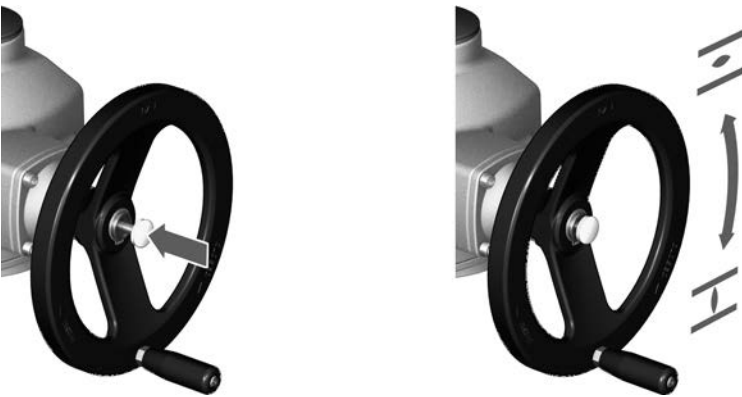Figure 42:



➔ The closing direction is marked on the handwheel.


Table 19: Handwheel marking (examples)

→ For valve closing, turn handwheel in direction of the arrowhead.	
 clockwise closing	 counterclockwise closing
Drive shaft (valve) turns clockwise in direction CLOSE.	Drive shaft (valve) turns counterclockwise in direction CLOSE.

Overload protection for manual operation

To protect the valve, an overload protection is available as option for manual operation. If the torque applied at the handwheel exceeds a certain value (refer to order-related technical data sheet), the shear pins will rupture and thus protect the valve from damage. The handwheel can no longer transmit the torque (= handwheel is spinning). Motor operation is still possible. In case of shear pin rupture due to overload, imperatively replace the safety hub.

Figure 43: Handwheel without/with overload protection

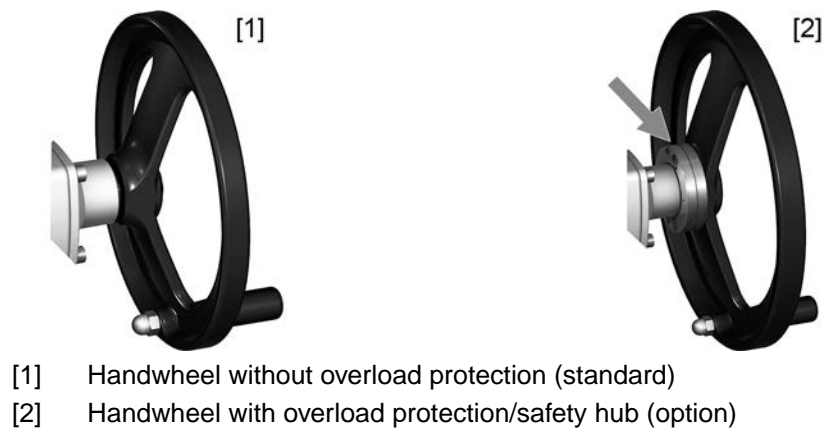

7.2. Motor operation

NOTICE

Valve damage due to incorrect basic setting!

→ Prior to electric actuator operation, perform the basic settings for “type of seating” and “torque switching”.

7.2.1. Operating the actuator from local controls

Local actuator operation is performed using the local controls push buttons of actuator controls.

Figure 44: Local controls






Hot surfaces, e.g. possibly caused by high ambient temperatures or strong direct sunlight!



Risk of burns

→ Verify surface temperature and wear protective gloves.

→ Set selector switch [5] to position **Local control** (LOCAL).



➔ The actuator can now be operated using the push buttons [1 – 3]:

- Run actuator in direction OPEN: Press push button [1] .
- Stop actuator: Press push button STOP [2].
- Run actuator in direction CLOSE: Press push button [3] .

Information

The OPEN and CLOSE operation commands can be given either in push-to-run or in self-retaining operation mode. In self-retaining mode, the actuator runs to the defined end position after pressing the button, unless another command has been received beforehand. For further information, please refer to the Manual (Operation and setting).

7.2.2. Actuator operation from remote




Risk of immediate actuator operation when switching on!

Risk of personal injuries or damage to the valve

- If the actuator starts unexpectedly: Immediately turn selector switch to **0** (OFF).
- Check input signals and functions.

→ Set selector switch to position **Remote control** (REMOTE).



➔ Now, the actuator can be remote-controlled via fieldbus.


Information

For actuators equipped with a positioner, it is possible to change over between **OPEN - CLOSE control** (Remote OPEN-CLOSE) and **setpoint control** (Remote SET-POINT). For further information, please refer to the Manual (Operation and setting).

7.3. Menu navigation via push buttons (for settings and indications)


Menu navigation for display and setting is made via the push buttons [1 – 4] of the local controls.

Set the selector switch [5] to position **0** (OFF) when navigating through the menu.



The bottom row of the display [6] serves as navigation support and explains which push buttons [1 – 4] are used for menu navigation.

Figure 45:

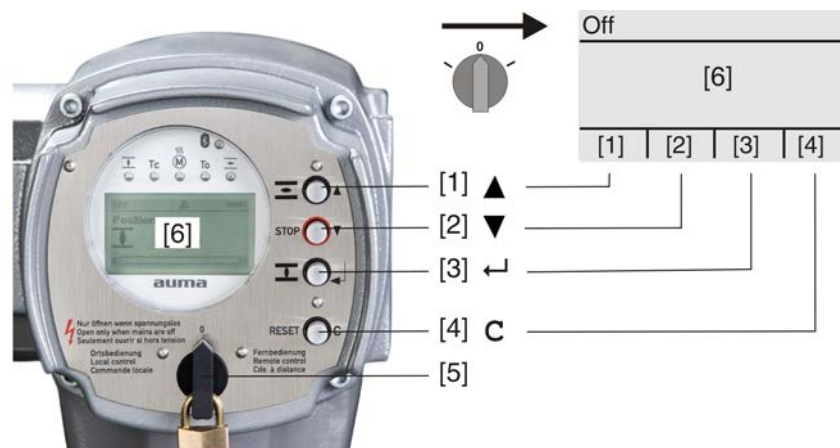

- [1–4] Push buttons or navigation support
 [5] Selector switch
 [6] Display

Table 20: Important push button functions for menu navigation

Push buttons	Navigation support on display	Functions
[1] ▲	Up ▲	Change screen/selection Change values Enter figures from 0 to 9
[2] ▼	Down ▼	Change screen/selection Change values Enter figures from 0 to 9
[3] ↵	Ok	Confirm selection
	Save	Save
	Edit	Enter <Edit> menu
	Details	Display more details
[4] C	Setup	Enter Main menu
	Esc	Cancel process Return to previous display

- Backlight**
- The display is illuminated in white during normal operation. It is illuminated in red in case of a fault.
 - The screen illumination is brighter when operating a push button. If no push button is operated for 60 seconds, the display will become dim again.

7.3.1. Menu layout and navigation

Groups The indications on the display are divided into 3 groups:


Figure 46: Groups



- [1] Start menu
 [2] Status menu
 [3] Main menu

ID Status menu and main menu are marked with an ID.

Figure 47: Marking with ID



S ID starts with S = status menu


M ID starts with M = main menu

Group selection

It is possible to select between status menu **S** and main menu **M**:

For this, set selector switch to **0** (OFF), hold down push button **C** for approx. 2 seconds until a screen containing the ID **M...** appears.

Figure 48: Select menu groups

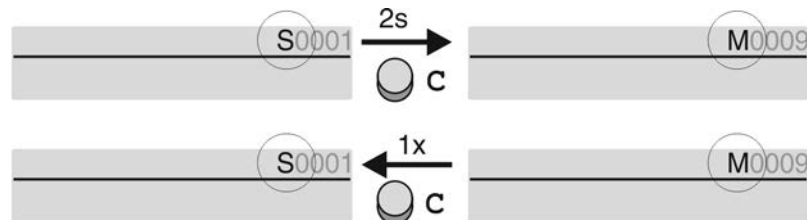


You return to the status menu if:

- the push buttons on the local controls have not been operated within 10 minutes
- or by briefly pressing **C**

Direct display via ID

When entering the ID within the main menu, screens can be displayed directly (without clicking through).

Figure 49: Direct display (example)

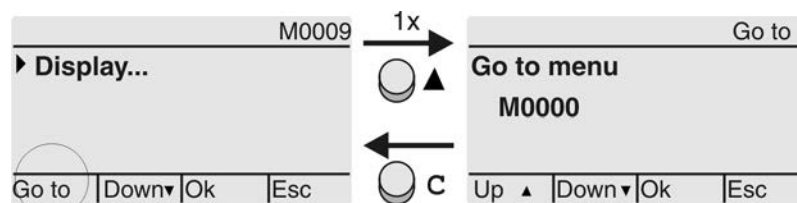

Display indicates in the bottom row: **Go to**

- Press push button **▲ Go to**.
Display indicates: **Go to menu M0000**
- Use push buttons **▲▼ Up ▲ Down ▼** to select figures 0 to 9.
- Press push button **◀ Ok** to confirm first digit.
- Repeat steps 2 and 3 for all further digits.
- To cancel the process: Press **C Esc**.


7.4. User level, password

User level

The user level defines which menu items or parameters can be displayed or modified by the active user.

There are 6 different user levels. The user level is indicated in the top row:

Figure 50: User level display (example)

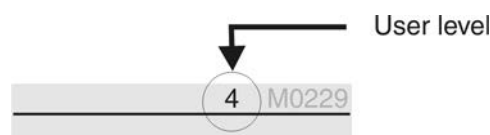

Password

A password must be entered to allow parameter modification. The display indicates: **Password 0*****

A specific password is assigned to each user level and permits different actions.

Table 21:

User levels and authorisations	
Designation (user level)	Authorisation/password
Observer (1)	Verify settings No password required
Operator (2)	Change settings Default factory password: 0000
Maintenance (3)	Reserved for future extensions
Specialist (4)	Change device configuration e.g. type of seating, assignment of output contacts Default factory password: 0000
Service (5)	Service staff Change configuration settings
AUMA (6)	AUMA administrator



Unauthorised access is made easier due to insecure password!

→ We urgently recommend changing the password during initial commissioning.

7.4.1. Password entry

1. Select desired menu and hold down push button for approx. 3 seconds.
→ Display indicates the set user level, e.g. **Observer (1)**
2. Select higher user level via **Up** and confirm with **Ok**.
→ Display indicates: **Password 0*****
3. Use push buttons **Up** **Down** to select figures 0 to 9.
4. Confirm first digit of password via push button **Ok**.
5. Repeat steps 1 and 2 for all further digits.
→ Having confirmed the last digit with **Ok**, access to all parameters within one user level is possible if the password entry is correct.

7.4.2. Password change

Only the passwords of same or lower access level may be changed.


Example: If the user is signed in as **Specialist (4)**, he/she can change passwords as for password levels (1) through (4).

M ▶ **Device configuration** M0053
Service functions M0222
Change passwords M0229

Menu item **Service functions** M0222 is only visible, if user level **Specialist (4)** or higher is selected.

Select main menu

1. Set selector switch to position **0** (OFF).



2. Press push button **C Setup** and hold it down for approx. 3 seconds.
→ Display goes to main menu and indicates: ▶ **Display**

Change passwords

3. Select parameter **Change passwords** either:
 - click via the menu **M ▶** to parameter, or
 - via direct display: press **▲** and enter ID **M0229**
- Display indicates: **▶ Change passwords**
- The user level is indicated in the top row (1 – 6), e.g.:



- For user level 1 (view only), passwords cannot be changed. To change passwords, you must change to a higher user level. For this, enter a password via a parameter.
4. For a user level between 2 and 6: Press push button **↵** **Ok**.
 - ➔ The display indicates the highest user level, e.g.: **For user 4**
5. Select user level via push buttons **▲▼** **Up ▲** **Down ▼** and confirm with **↵** **Ok**.
 - ➔ Display indicates: **▶ Change passwords Password 0*****
6. Enter current password (→ enter password).
 - ➔ Display indicates: **▶ Change passwords Password (new) 0*****
7. Enter new password (→ enter password).
 - ➔ Display indicates: **▶ Change passwords For user 4 (example)**
8. Select next user level via push buttons **▲▼** **Up ▲** **Down ▼** or cancel the process via **Esc**.

7.4.3. Timeout for incorrect password entry

A timeout for incorrect password entry is provided with actuator controls. This prevents unauthorised access by systematic trials. The timeout is active for incorrect entries via the local controls as well as incorrect entries via our software tools (AUMA CDT, AUMA Assistant App). After five subsequent incorrect trials, further entry is inhibited for one minute. Each further incorrect entry doubles the timeout period. An active timeout is displayed on the screen. An individual timeout is available for each user level. This means that you may still log on with user level 3 if user level 4 is inhibited.

The incorrect entry counter can be reset in two ways:

1. Correct password entry with successful access authorisation.
2. 8 hours after the last incorrect entry.

7.5. Language in the display


The display language can be selected.

7.5.1. Language change

M ▶ **Display M0009**
Language M0049

Select main menu

1. Set selector switch to position **0** (OFF).



2. Press push button **C Setup** and hold it down for approx. 3 seconds.
 - ➔ Display goes to main menu and indicates: **▶ Display**

Change language

3. Press **↵** **Ok**.
 - ➔ Display indicates: **▶ Language**
4. Press **↵** **Ok**.
 - ➔ Display indicates the selected language, e.g.: **▶ Deutsch**

Language selection

5. The bottom row of the display indicates:
 - **Save** → continue with step 10
 - **Edit** → continue with step 6
6. Press **↵ Edit**.
 - ➡ Display indicates: **► Observer (1)**
7. Select user level via **▲▼ Up ▲ Down ▼** resulting in the following significations:
 - black triangle: **►** = current setting
 - white triangle: **▷** = selection (not saved yet)
8. Press **↵ Ok**.
 - ➡ Display indicates: **Password 0*****
9. Enter password (→ enter password).
 - ➡ Display indicates: **► Language** and **Save** (bottom row)
10. Select new language via **▲▼ Up ▲ Down ▼** resulting in the following significations:
 - black triangle: **►** = current setting
 - white triangle: **▷** = selection (not saved yet)
11. Confirm selection via **↵ Save**.
 - ➡ The display changes to the new language. The new language selection is saved.


8. Indications

8.1. Indications during commissioning

LED test

When switching on the power supply, all LEDs on the local controls illuminate for approx. 1 second. This optical feedback indicates that the voltage supply is connected to the controls and all LEDs are operable.

Figure 51: LED test

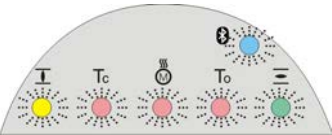

Language selection

During the self-test, the language selection can be activated so that the selected language is immediately indicated in the display. For this, set selector switch to position 0 (OFF).


Activate language selection:

1.

Display indicates in the bottom line: **Language selection menu? 'Reset'**
2.

Hold down push button **RESET** until display of the following text in the bottom line: **Language menu loading, please wait.**

Figure 52: Self-test

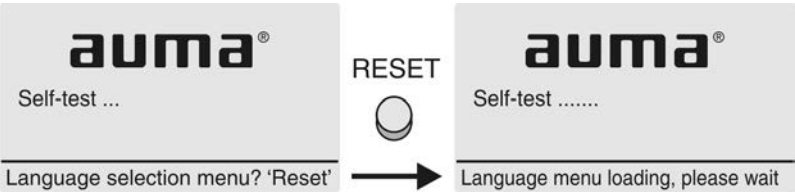

The language selection menu follows the startup menu.

Startup menu


The current firmware version is displayed during the startup procedure:

Figure 53: Startup menu with firmware version: 05.00.00–xxxx



If the language selection feature has been activated during the self-test, the menu for selecting the display language will now be indicated. For further information on language setting, please refer to chapter <Language in the display>.

Figure 54: Language selection

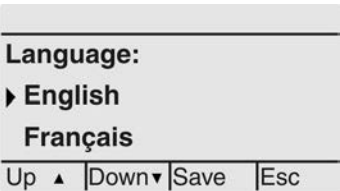


If no entry is made over a longer period of time (approx. 1 minute), the display automatically returns to the first status indication.

8.2. Indications in the display

Menus and functions depend on the actuator controls firmware version!
→ Should menus or functions be unavailable, please contact the AUMA Service.

Status bar The status bar (first row in the display) indicates the operation mode [1], the presence of an error [2] and the ID number [3] of the current display indication.


Figure 55: Information in the status bar (top)

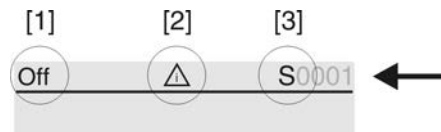

- [1] Operation mode
- [2] Error symbol (only for faults and warnings)
- [3] ID number: S = Status page

Navigation support If further details or information are available with reference to the display, the following indications **Details** or **More** appear in the navigation support (bottom display row). Then, further information can be displayed via the push button.

Figure 56: Navigation support (bottom)

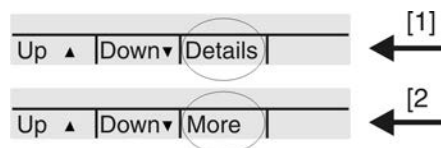

- [1] shows list with detailed indications
- [2] shows further available information

The navigation support (bottom row) is faded out after approx. 3 seconds. Press any push button (selector switch in position 0 (OFF)) to fade in the navigation support.


8.2.1. Feedback signals from actuator and valve

Display indications depend on the actuator version.

Valve position (S0001)


- S0001 on the display indicates the valve position in % of the travel.
- The bar graph display appears after approx. 3 seconds.
- When issuing an operation command, an arrow indicates the direction (OPEN/CLOSE).

Figure 57: Valve position and direction of operation

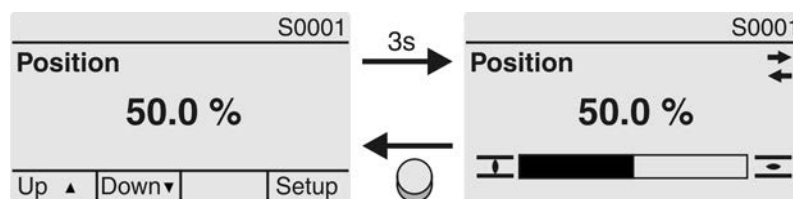

Reaching the preset end positions is additionally indicated via (CLOSED) and (OPEN) symbols.

Figure 58: End position CLOSED/OPEN reached

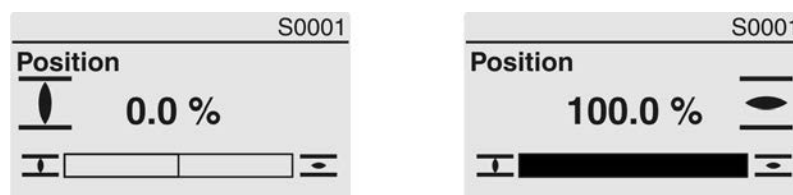


- 0% Actuator is in end position CLOSED
- 100% Actuator is in end position OPEN

Torque (S0002)

- S0002 on the display indicates the torque applied at the actuator output.

- The bar graph display appears after approx. 3 seconds.


Figure 59: Torque

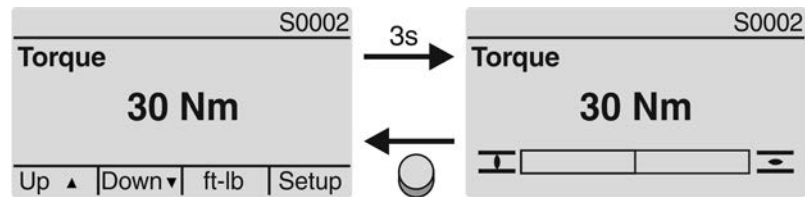

Select unit

The push button allows to select the unit displayed (percent %, Newton metre Nm or "foot-pound" ft-lb)

Figure 60: Units of torque

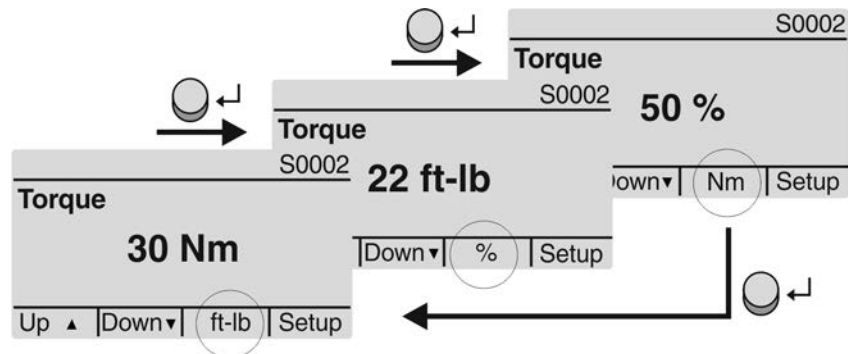

Display in percent

100 % indication equals the max. torque indicated on the name plate of the actuator.

Example: Torque range on name plate = 20 – 60 Nm.

- 100 % corresponds to 60 Nm of nominal torque.
- 50 % corresponds to 30 Nm of nominal torque.

Operation commands (S0003)

The display S0003 indicates:


- active operation commands, like e.g.: Operation in direction CLOSE or in direction OPEN
- the actual value E2 as bar graph indication and as value between 0 and 100 %.
- for setpoint control (positioner): setpoint E1
- for stepping mode or for intermediate positions with operation profile: pivot points and operation behaviour of pivot points

The navigation support (bottom row) is faded out after approx. 3 seconds and the axis/axes for pivot point display are shown.

OPEN - CLOSE control

Active operation commands (OPEN, CLOSE, ...) are shown above the bar graph display. The figure below shows the operation command in direction CLOSE.

Figure 61: Display for OPEN - CLOSE control

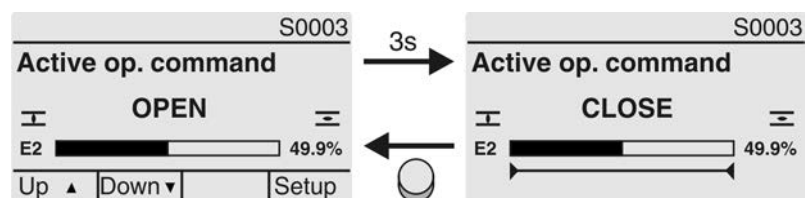


E2 Actual position value

Setpoint control

If the positioner is enabled and activated, the bar graph indication for E1 (position setpoint) is displayed.

The direction of the operation command is displayed by an arrow above the bar graph indication. The figure below shows the operation command in direction CLOSE.

Figure 62: Indication for setpoint control (positioner)

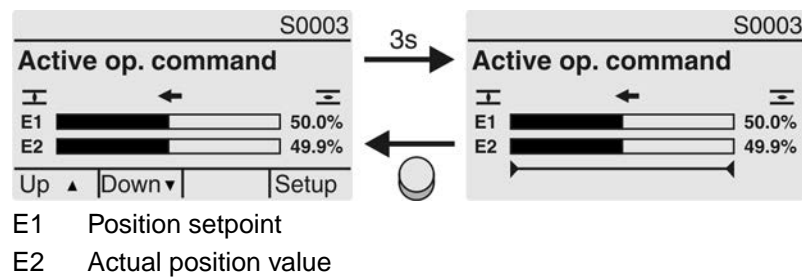

Pivot point axis

The pivot points and their operation behaviour (operation profile) are shown on the pivot point axis by means of symbols.

The symbols are only displayed if at least one of the following functions is activated:

Operation profile M0294

Timer CLOSE M0156

Timer OPEN M0206

Figure 63: Examples: on the left pivot points (intermediate positions); on the right stepping mode



Table 22: Symbols along the pivot point axis

Symbol	Pivot point (intermediate position) with operation profile	Stepping mode
	Pivot point without reaction	End of stepping mode
◀	Stop during operation in direction CLOSE	Start of stepping mode in direction CLOSE
▶	Stop during operation in direction OPEN	Start of stepping mode in direction OPEN
◆	Stop during operation in directions OPEN and CLOSE	–
◁	Pause for operation in direction CLOSE	–
▷	Pause for operation in direction OPEN	–
◇	Pause for operation in directions OPEN and CLOSE	–

8.2.2. Status indications according to AUMA classification


These indications are available if the parameter **Diagnostic classific. M0539** is set to **AUMA**.

Warnings (S0005)

If a warning has occurred, the display shows **S0005**:

- the number of warnings occurred
- a blinking question mark after approx. 3 seconds

Figure 64: Warnings

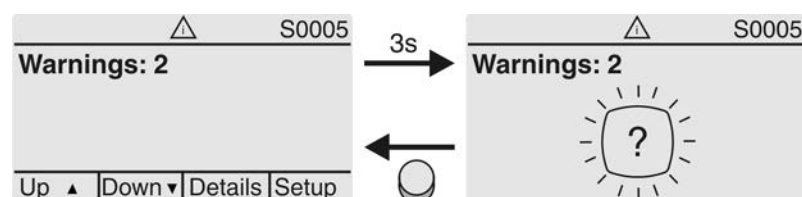

For further information, please also refer to <Corrective action>.


Not ready REMOTE (S0006)

The S0006 display shows indications of the Not ready REMOTE group.

If such an indication has occurred, the display shows S0006:

- the number of indications occurred
- a blinking crossbar after approx. 3 seconds

Figure 65: Not ready REMOTE indications

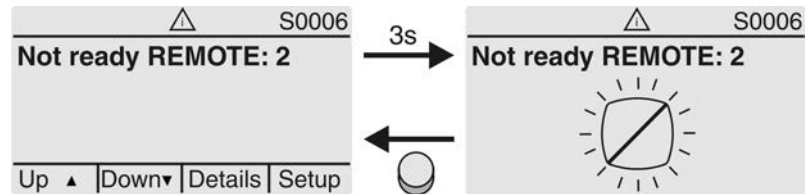


For further information, please also refer to <Corrective action>.

Fault (S0007)

If a fault has occurred, the display shows S0007:

- the number of faults occurred
- a blinking exclamation mark after approx. 3 seconds

Figure 66: Fault

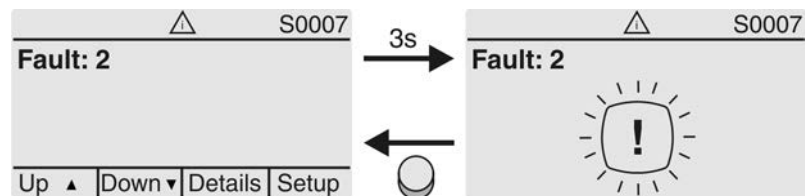

For further information, please also refer to <Corrective action>.

8.2.3. Status indications according to NAMUR recommendation

These indications are available, if the parameter **Diagnostic classific. M0539** is set to **NAMUR**.


Out of Specification (S0008)

The S0008 indication shows out of specification indications according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows S0008:

- the number of indications occurred
- a blinking triangle with question mark after approx. 3 seconds

Figure 67: Out of specification

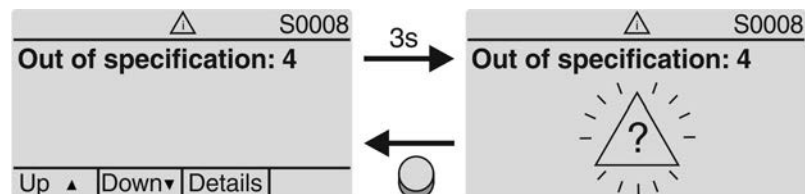

For further information, please also refer to <Corrective action>.


Function check (S0009)

The S0009 indication shows function check indications according to NAMUR recommendation NE 107.

If an indication has occurred via the function check, the display shows S0009:

- the number of indications occurred
- a blinking triangle with a spanner after approx. 3 seconds

Figure 68: Function check

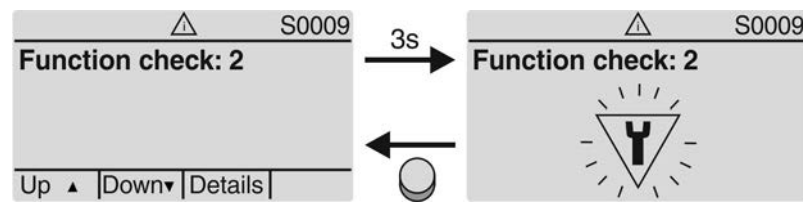

For further information, please also refer to <Corrective action>.


Maintenance required (S0010)

The **S0010** indication shows maintenance indications according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows **S0010**:

- the number of indications occurred
- a blinking square with an oilcan after approx. 3 seconds

Figure 69: Maintenance required

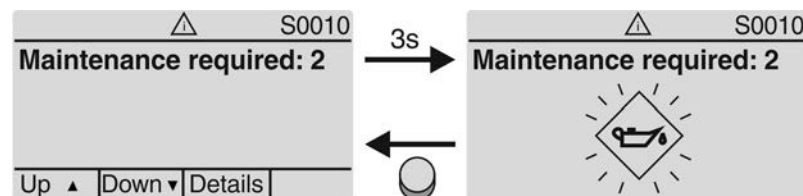

For further information, please also refer to <Corrective action>.


Failure (S0011)

The **S0011** indication shows the causes of the failure indication according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows **S0011**:

- the number of indications occurred
- a blinking circle with a cross after approx. 3 seconds

Figure 70: Failure

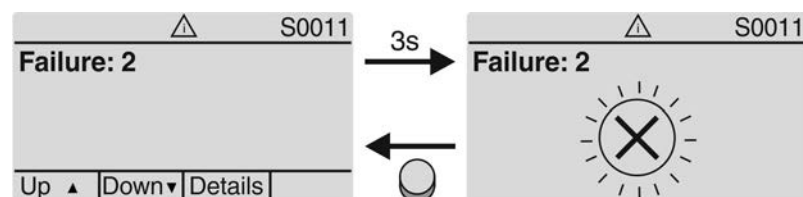

For further information, please also refer to <Corrective action>.

8.3. Indication lights of local controls

Figure 71: Arrangement and signification of indication lights



- [1] Marking with symbols (standard)
- [2] Marking with figures 1 – 6 (option)
- 1 End position CLOSED reached (blinking: operation in direction CLOSE)
- 2 Tc Torque fault CLOSE
- 3 Motor protection tripped
- 4 To Torque fault OPEN
- 5 End position OPEN reached (blinking: operation in direction OPEN)
- 6 Bluetooth connection active

Modify indication light assignment (indications)

Different indications can be assigned to LEDs 1 – 5.

M ► **Device configuration** M0053
 Local controls M0159
 Indication light 1 (left) M0093
 Indication light 2 M0094
 Indication light 3 M0095
 Indication light 4 M0096
 Indicat. light 5 (right) M0097
 Signal interm. pos. M0167

Default values (Europe):

Indication light 1 (left) = End p. CLOSED, blink
Indication light 2 = Torque fault CLOSE
Indication light 3 = Thermal fault
Indication light 4 = Torque fault OPEN
Indicat. light 5 (right) = End p. OPEN, blink
Signal interm. pos. = OPEN/CLOSED = Off

Further setting values:

Refer to Manual (Operation and setting).

8.4. Optional indications

8.4.1. Mechanical position indication (self-adjusting)

Figure 72: Mechanical position indicator



- [1] End position OPEN reached
- [2] End position CLOSED reached

Characteristics

- Independent of power supply
- Used as running indication: Indicator disc (with arrow \Rightarrow) rotates during actuator operation and continuously indicates the valve position (For “clockwise closing version”, the arrow rotates in clockwise direction for operation in direction CLOSE)
- Indicates that end positions (OPEN/CLOSED) have been reached
Arrow \Rightarrow points to symbol \equiv (OPEN) or \perp (CLOSED)
- Self-adjusting during commissioning (cover must not be opened)

8.4.2. Mechanical position indication via indicator mark (not self-adjusting)

Figure 73: Mechanical position indicator



- [1] End position OPEN reached
- [2] End position CLOSED reached
- [3] Indicator mark at cover

Characteristics

- Independent of power supply
- Used as running indication: Indicator disc rotates during actuator operation and continuously indicates the valve position (For “clockwise closing ” version, the symbols \equiv/\perp rotate in counterclockwise direction for operations in direction CLOSE)
- Indicates that end positions (OPEN/CLOSED) have been reached (Symbols \equiv (OPEN)/ \perp (CLOSED) point to the indicator mark \blacktriangle at cover)

9. Signals (output signals)

9.1. Status signals via output contacts (digital outputs)

- Conditions** Output contacts are only available if a parallel interface is provided in addition to the communication interface.
- Characteristics** Output contacts are used to send status signals (e.g. reaching the end positions, selector switch position, faults...) as binary signals to the control room.
- Status signals only have two states: active or inactive. Active means that the conditions for the signal are fulfilled.

9.1.1. Assignment of outputs

The output contacts (outputs DOUT 1 – 6) can be assigned to various signals.
Required user level: **Specialist (4)** or higher.

M ▶ **Device configuration M0053**
 I/O interface M0139
 Digital outputs M0110
 Signal DOUT 1 M0109

Default values:

Signal DOUT 1 = **Fault**
Signal DOUT 2 = **End position CLOSED**
Signal DOUT 3 = **End position OPEN**
Signal DOUT 4 = **Selector sw. REMOTE**
Signal DOUT 5 = **Torque fault CLOSE**
Signal DOUT 6 = **Torque fault OPEN**

9.1.2. Coding the outputs

The output signals **Coding DOUT 1** – **Coding DOUT 6** can be set either to high active or low active.

- High active = output contact closed = signal active
 - Low active = output contact open = signal active
- Signal active means that the conditions for the signal are fulfilled.

Required user level: **Specialist (4)** or higher.

M ▶ **Device configuration M0053**
 I/O interface M0139
 Digital outputs M0110
 Coding DOUT 1 M0102

Default values:


Coding DOUT 1 = **Low active**
Coding DOUT 2–Coding DOUT 6 = **High active**

9.2. Analogue signals (analogue outputs)

- Requirements** Analogue signals are only available if additional input signals are provided.
- Valve position** Signal: E2 = 0/4 – 20 mA (galvanically isolated)
Designation in the wiring diagram: AOUT1 (position)
- Torque feedback** Signal: E6 = 0/4 – 20 mA (galvanically isolated)
Designation in the wiring diagram: AOUT2 (torque)
For further information on this topic, please refer to Manual (Operation and setting).

10. Commissioning (basic settings)

1. Set selector switch to position **0** (OFF).

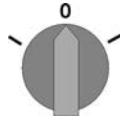

Information: The selector switch is not a mains switch. When positioned to **0** (OFF), the actuator cannot be operated. The controls' power supply is maintained.

2. Switch on the power supply.

Information: Observe heat-up time for ambient temperatures below –30 °C.

3. Perform basic settings.

10.1. Type of seating: set

NOTICE

Valve damage due to incorrect setting!

- The type of seating setting (limit or torque seating) must match the selection for the valve.
- Only change the setting with prior consent of the valve manufacturer.

M ▶ Customer settings M0041
Type of seating M0012
End position CLOSED M0086
End position OPEN M0087

Default value: Limit


Setting values:

Limit Seating in end positions via limit switching.

Torque Seating in end positions via torque switching.

Select main menu

1. Set selector switch to position **0** (OFF).

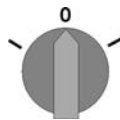

2. Press push button **C Setup** and hold it down for approx. 3 seconds.

➔ Display goes to main menu and indicates: ▶ Display

Select parameter

3. Select parameter either:
 - click via the menu M ▶ to parameter, or
 - via direct display: Press ▲ and enter ID M0086 or M0087

➔ Display indicates: End position CLOSED

CLOSE or OPEN

4. Use ▲▼ Up ▲ Down ▼ to select:
 - ▶ End position CLOSED
 - ▶ End position OPEN
- ➔ The black triangle ▶ indicates the current selection.
5. Press ◀ Ok.
- ➔ Display indicates the current setting: Limit or Torque
- ➔ The bottom row of the display indicates either:
 - Edit → continue with step 6
 - Save → continue with step 10

- | | |
|------------------------|---|
| User login | 6. Press ↵ Edit .
➔ Display indicates: ► Specialist (4)
7. Use ▲▼ Up ▲ Down ▼ to select user:
Information: Required user level: Specialist (4) or higher
➔ The symbols have the following meaning:
- black triangle: ► = current setting
- white triangle: ▷ = selection (not saved yet)
8. Press ↵ Ok .
➔ Display indicates: Password 0***
9. Enter password (→ enter password).
➔ The screen indicates the pre-set type of seating (►Limit or ►Torque) by means of a black triangle ► . |
| Change settings | 10. Use ▲▼ Up ▲ Down ▼ to select new setting.
➔ The symbols have the following meaning:
- black triangle: ► = current setting
- white triangle: ▷ = selection (not saved yet)
11. Confirm selection via ↵ Save .
➔ The setting for the type of seating is complete.
12. Back to step 4 (CLOSED or OPEN): Press ↵ Esc . |

10.2. Torque switching: set

Once the set torque is reached, the torque switches will be tripped (overload protection of the valve).

Information The torque switches may also trip during manual operation.

NOTICE

Valve damage due to excessive tripping torque limit setting!


- The tripping torque must suit the valve.
- Only change the setting with the consent of the valve manufacturer.

M ▶ **Customer settings** **M0041**
Torque switching **M0013**
Trip torque CLOSE **M0088**
Trip torque OPEN **M0089**

Default value: According to order data

Setting range: Torque range according to actuator name plate

- Select main menu** 1. Set selector switch to position **0** (OFF).

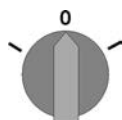

2. Press push button **C Setup** and hold it down for approx. 3 seconds.
 ➔ Display goes to main menu and indicates: **► Display**

- Select parameter** 3. Select parameter either:
 → click via the menu **M ▶** to parameter, or
 → via direct display: press **▲** and enter ID **M0088**.
 ➔ Display indicates: **Trip torque CLOSE**

- CLOSE or OPEN**
4. Use ▲▼ Up ▲ Down ▼ to select:
 - ▶ Trip torque CLOSE
 - ▶ Trip torque OPEN
 - ➡ The black triangle ▶ indicates the current selection.
 5. ⬅ Press **Ok**.
 - ➡ Display shows the set value.
 - ➡ The bottom row indicates: **Edit Esc**
 6. ⬅ Press **Edit**.
 - ➡ Display indicates:
 - **Specialist (4)** → continue with step 7
 - in bottom row **Up ▲ Down ▼ Esc** → continue with step 11
- User login**
7. Use ▲▼ Up ▲ Down ▼ to select user:

Information: Required user level: **Specialist (4)** or higher.

 - ➡ The symbols have the following meanings:
 - black triangle: ▶ = current setting
 - white triangle: ▷ = selection (not saved yet)
 8. ⬅ Press **Ok**.
 - ➡ Display indicates: **Password 0*****
 9. Enter password (→ enter password).
 - ➡ Display shows the set value.
 - ➡ The bottom row indicates: **Edit Esc**
 10. ⬅ Press **Edit**.
- Change value**
11. Enter new value for tripping torque via ▲▼ Up ▲ Down ▼.

Information: The adjustable torque range is shown in round brackets.
 12. Save new value via ⬅ **Save**.
 - ➡ The tripping torque is set.
 13. Back to step 4 (CLOSED or OPEN): Press ⬅ **Esc**.
- Information**
- The following fault signals are issued if the torque setting performed has been reached **in mid-travel**:
- In the display of the local controls: Status indication **S0007 Fault = Torque fault OPEN** or **Torque fault CLOSE**
- The fault has to be acknowledged before the operation can be resumed. The acknowledgement is made:
1. either by an operation command in the opposite direction.
 - For **Torque fault OPEN**: Operation command in direction **CLOSE**
 - For **Torque fault CLOSE**: Operation command in direction **OPEN**
 2. or, in case the torque applied is lower than the preset tripping torque:
 - in selector switch position **Local control (LOCAL)** via push button **RESET**.
 - in selector switch position **Remote control (REMOTE)**:
 - via the fieldbus, command reset., if the fieldbus is the active command source.
 - via a digital input (I/O interface) with **RESET** command if a digital input is configured for signal **RESET** and the I/O interface is the active command source.

10.3. Limit switching: set


NOTICE

Valve damage at valve/gearbox due to incorrect setting!

- When setting with motor operation: Stop actuator **prior** to reaching end of travel (press STOP push button).
- For limit seating, provide for sufficient backlash between end position and mechanical end stop due to potential overrun.

M ▶ Customer settings M0041
Limit switching M0010
Set end pos.CLOSED? M0084
Set end pos. OPEN? M0085

Select main menu 1. Set selector switch to position 0 (OFF).

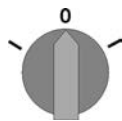

2. Press push button **C** and hold it down for approx. 3 seconds.

→ Display goes to main menu and indicates: ▶ Display

Select parameter 3. Select parameter either:

- click via the menu M ▶ to parameter, or
- via direct display: press ▲ and enter ID M0084.

→ Display indicates: Set end pos.CLOSED?

CLOSED or OPEN 4. Select via ▲▼ Up ▲ Down ▼:

- ▶ Set end pos.CLOSED? M0084
- ▶ Set end pos. OPEN? M0085

→ The black triangle ▶ indicates the current selection.

5. Press **Ok**.

→ The display indicates either:

- Set end pos.CLOSED? CMD0009 → continue with step 9
- Set end pos. OPEN? CMD0010 → continue with step 12
- Specialist (4) → continue with step 6

User login 6. Use ▲▼ Up ▲ Down ▼ to select user:

Information: Required user level: Specialist (4) or higher

→ The symbols have the following meaning:

- black triangle: ▶ = current setting
- white triangle: ▷ = selection (not saved yet)

7. Press **Ok** to confirm selected user.


→ Display indicates: Password 0***

8. Enter password (→ enter password).

→ The display indicates either:


- Set end pos.CLOSED? CMD0009 → continue with step 9
- Set end pos. OPEN? CMD0010 → continue with step 12


Set end position CLOSED CMD0009

9. Set end position CLOSED again :
 - 9.1 For large strokes: Set selector switch in position **Local control** (LOCAL) and operate actuator in motor operation via push button  (CLOSE) in direction of the end position.
Information: Stop actuator **before** reaching end of travel (press **STOP** push button to avoid damage).
 - 9.2 Engage manual operation.
 - 9.3 Turn handwheel until valve is closed.
 - 9.4 Turn handwheel by approximately half a turn (overrun) in the opposite direction of end position.
 - 9.5 Set selector switch to position **0** (OFF).

➔ Display indicates: **Set end pos.CLOSED? Yes No**


Confirm new end position

10. Press  **Yes** to confirm new end position.
➔ Display indicates: **End pos. CLOSED set!**
➔ The left LED is illuminated (standard version) and thus indicates that the end position CLOSED setting is complete.

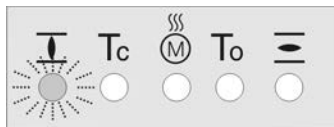


11. Make selection:
 - **Edit** → back to step 9: Set end position CLOSED "once again"
 - **Esc** → back to step 4; either set end position OPEN or exit the menu.


Set end position OPEN CMD0010

12. Re-set end position OPEN:
 - 12.1 For large strokes: Set selector switch in position **Local control** (LOCAL) and operate actuator in motor operation via push button  (OPEN) in direction of the end position.
Information: Stop actuator **before** reaching end of travel (press **STOP** push button to avoid damage).
 - 12.2 Engage manual operation.
 - 12.3 Turn handwheel until valve is open.
 - 12.4 Turn handwheel by approximately half a turn (overrun) in the opposite direction of end position.
 - 12.5 Set selector switch to position **0** (OFF).

➔ Display indicates: **Set end pos. OPEN? Yes No**

Confirm new end position

13. Press  **Yes** to confirm new end position.
➔ Display indicates: **End pos. OPEN set!**
➔ The right LED is illuminated (standard version) and thus indicates that the end position OPEN setting is complete.

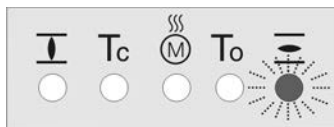

14. Make selection:
 - **Edit** → back to step 12: Set end position OPEN "once again"
 - **Esc** → back to step 4; either set end position CLOSED or exit the menu.

Information If an end position cannot be set: Check the type of control unit in actuator.

10.4. Output speed (internal): set

This setting is only required if an internally specified speed is set as speed source:

- Sp. source... = Internal 1/Internal 2/Internal 3/Internal 4
- Sp. source... = 2 DigIn: "Internal (1-4)"

If the actuator is controlled via an external speed source, the internal speed values described here will not have an impact on the operation behaviour.


For further information on setting the speed source refer to Manual (Operation and Setting):

M ▶ Customer settings M0041
Speed functions M1699
Speed internal1 M1930
Speed internal2 M1931
Speed internal3 M1932
Speed internal 4 M1933
Speed rem. min. M1936
Speed rem. max M1937

Default value: according to order data

Setting range: The adjustable speed range is indicated on the actuator name plate.

- Select main menu** 1. Set selector switch to position **0** (OFF).

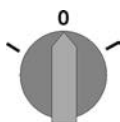

2. Press push button **C Setup** and hold it down for approx. 3 seconds.

➡ Display goes to main menu and indicates: ▶ **Display**

- Select parameter** 3. Select parameter either:

- click via the menu **M ▶** to parameter, or
- via direct display: Press **▲** and enter ID, e.g.: **M1930**.

➡ Display indicates: **Speed internal1**

- Selection:** 4. Select via **▲ ▼ Up ▲ Down ▼**:

- ▶ **Speed internal1 M1930**
- ▶ **Speed internal2 M1931**
- ▶ **Speed internal3 M1932**
- ▶ **Speed internal 4 M1933**
- ▶ **Speed rem. min. M1936**
- ▶ **Speed rem. max M1937**

➡ The black triangle ▶ indicates the current selection.

5. Press **↵ Ok**.

➡ Display shows the set value.

➡ The bottom row indicates: **Edit Esc**

6. Press **↵ Edit**.

➡ Display indicates:

- **Specialist (4)** → continue with step 7
- in bottom row **Up ▲ Down ▼ Esc** → continue with step 11

- Log on user

7.

Use ▲▼ Up ▲ Down ▼ to select user:

Information: Required user level: **Specialist (4)** or higher

➔ The symbols have the following meaning:

- black triangle: ► = current setting
- white triangle: ▷ = selection (not saved yet)

8.

Press ⬅ Ok.

➔ Display indicates: **Password 0*****

9.

Enter password (→ enter password).

➔ Display shows the set value.

➔ The bottom row indicates: **Edit Esc**

10.

Press ⬅ Edit.
- Change value

11.

Enter new value for speed via ▲▼ Up ▲ Down ▼.

Information: The adjustable speed range is shown in round brackets.

12.

Save new value via ⬅ Save.

➔ Speed setting is complete.

13.

Return to step 4 (Selection): Press ⬅ Esc.

10.5.
Test run

Only perform test run only once all settings previously described have been performed.

The direction of rotation can be checked at the position indicator if available. (Chapter <Direction of rotation at mechanical position indicator: check>)

The direction of rotation must be checked at the hollow shaft/stem if no mechanical position indicator is available. (Chapter <Direction of rotation at hollow shaft/stem: check>)

10.5.1.
Direction of rotation at mechanical position indicator: check

NOTICE

Valve damage due to incorrect direction of rotation!

➔ If the direction of rotation is wrong, switch off immediately (press STOP).
➔ Eliminate cause, i.e. correct phase sequence for cable set wall bracket.
➔ Repeat test run.

Information

Switch off before reaching the end position.

1. Move actuator manually to intermediate position or to sufficient distance from end position.

2. Switch on actuator in direction CLOSE and observe the direction of rotation on the mechanical position indication:

→ **For self-adjusting mechanical position indication:**

- ➔ The direction of rotation is correct if the actuator operates in direction **CLOSE** and arrow \Rightarrow turns **clockwise** in direction CLOSE (symbol $\overline{\text{I}}$).

Figure 74: Direction of rotation \Rightarrow (for “clockwise closing” version”)



→ **For mechanical position indication via indicator mark: (not self-adjusting)**


- ➔ The direction of rotation is correct if the actuator operation in direction **CLOSE** and the symbols ($\overline{\text{I}}$) turn **counterclockwise**:

Figure 75: Direction of rotation $\overline{\text{I}}$ (for “clockwise closing version”)



10.5.2. Direction of rotation at hollow shaft/stem: check

Figure 76: Direction of rotation of the hollow shaft/stem for operation in direction CLOSE ("clockwise closing" version)

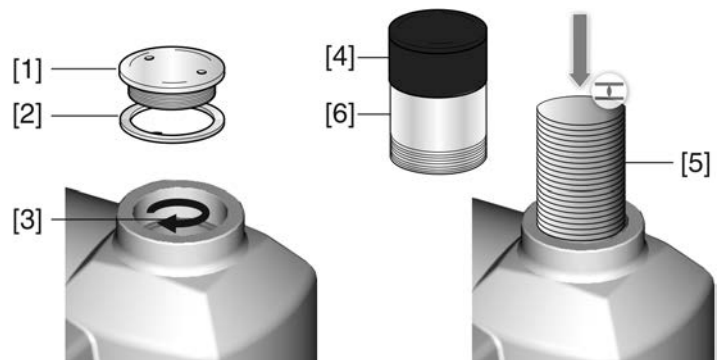

- [1] Threaded plug
- [2] Seal
- [3] Hollow shaft
- [4] Protective cap for stem protection tube
- [5] Stem
- [6] Stem protection tube

NOTICE

Valve damage due to incorrect direction of rotation!


- If the direction of rotation is wrong, switch off immediately (press STOP).
- Eliminate cause, i.e. correct phase sequence for cable set wall bracket.
- Repeat test run.

Check direction of rotation

1. Move actuator manually to intermediate position or to sufficient distance from end position.
2. Depending on the version: Unscrew threaded plug [1] with seal [2], protective cap [4] or stem protection tube [6].
3. Switch on actuator in direction CLOSE and observe direction of rotation at hollow shaft [3] or stem [5]:
 - ➡ The direction of rotation is correct if the actuator moves in direction **CLOSE** and the hollow shaft in **clockwise** direction, or the stem moves downward.
4. Correctly fit/screw on threaded plug [1] with seal [2], protective cap [4] for stem protection tube [6], fasten thread.

10.5.3. Limit switching: check

1. Set selector switch to position **Local control** (LOCAL).

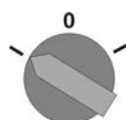

2. Operate actuator using push buttons OPEN, STOP, CLOSE.
 - ➡ The limit switching is set correctly if (default indication):
 - the yellow indication light/LED1 is illuminated in end position CLOSED
 - the green indication light/LED5 is illuminated in end position OPEN
 - the indication lights go out after travelling into opposite direction.
 - ➡ The limit switching is set incorrectly if:
 - the actuator comes to a standstill before reaching the end position
 - one of the red indication lights/LEDs is illuminated (torque fault)
 - the status indication **S0007** in the display signals a fault.
3. If the end position setting is incorrect: Reset limit switching.


11. Commissioning (settings/options in the actuator)

For actuators without mechanical position indicator (cover without indicator glass), no settings are required within the actuator when commissioning.

When equipped with the self-adjusting mechanical position indication [A], the position indication automatically adjusts upon the initial operation (e.g. from CLOSED to OPEN). This self-adjustment is generally performed when setting the limit switches (approaching the end positions). Manual setting and consequently opening the switch compartment is not necessary when commissioning.


In case the mechanical position indicator integrated within the actuator is NOT self-adjusting [B], the switch compartment must be opened for mechanical position indication adjustment when commissioning.

Figure 77: Mechanical position indications

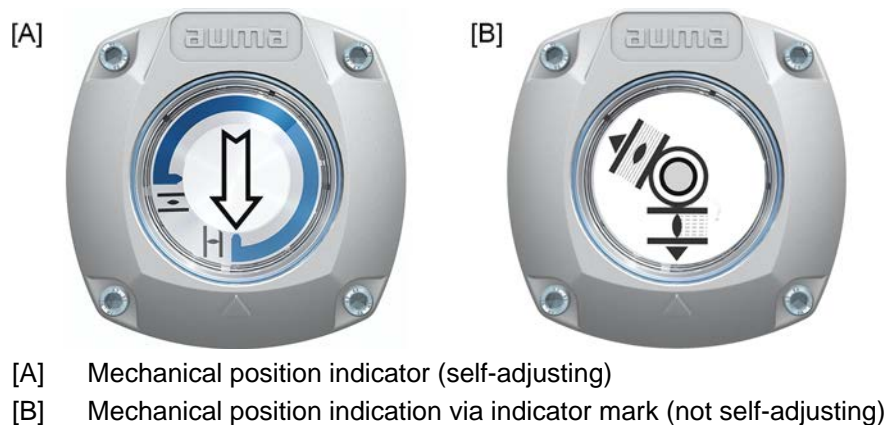

11.1. Switch compartment: open/close

Figure 78: Open/close switch compartment

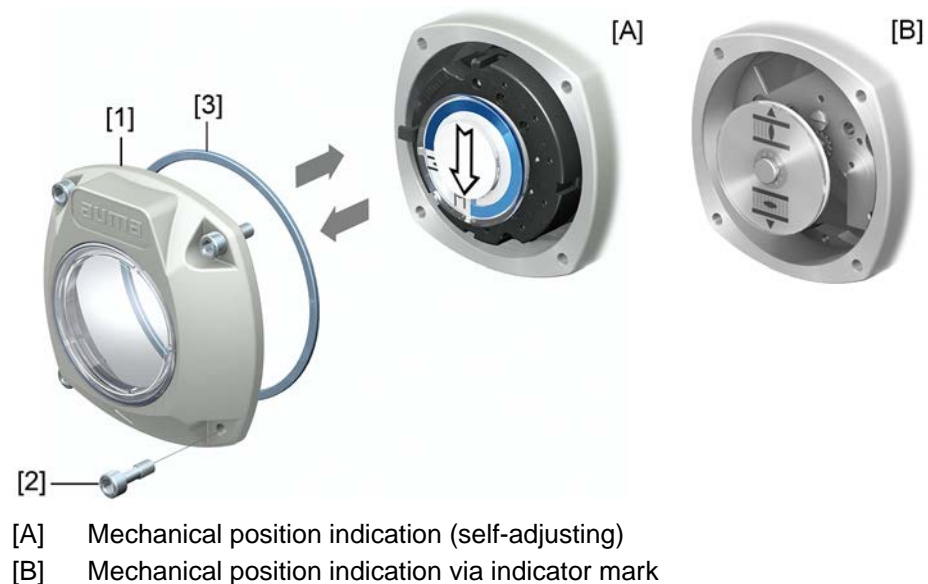

- | | |
|--------------|---|
| Open | 1. Loosen screws [2] and remove cover [1] from the switch compartment. |
| Close | 2. Clean sealing faces of housing and cover. |
| | 3. Check whether O-ring [3] is in good condition, replace if damaged. |
| | 4. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the O-ring and insert it correctly. |
| | 5. Place cover [1] on switch compartment. |
| | 6. Fasten screws [2] evenly crosswise. |

11.2. Mechanical position indicator (self-adjusting)

Figure 79: Mechanical position indicator (self-adjusting)




The self-adjusting mechanical position indicator shows the valve position by means of an arrow \Rightarrow . When correctly set, the arrow points to symbol \equiv (OPEN) or \perp (CLOSED) in the end positions.

Information The position indications is housed in the actuator switch compartment. Opening the switch compartment for manual setting is only necessary if the gear stage setting must be modified or if the factory settings of predefined end position CLOSED (or OPEN) must be adapted when commissioning.

11.2.1. Mechanical position indicator: set

1. Move valve to end position CLOSED.
2. Push both lower discs with the symbols \equiv (OPEN) and \perp (CLOSED) towards each other. The disc with the arrow is thereby \Rightarrow is driven:



Figure 80: Setting position in CLOSED

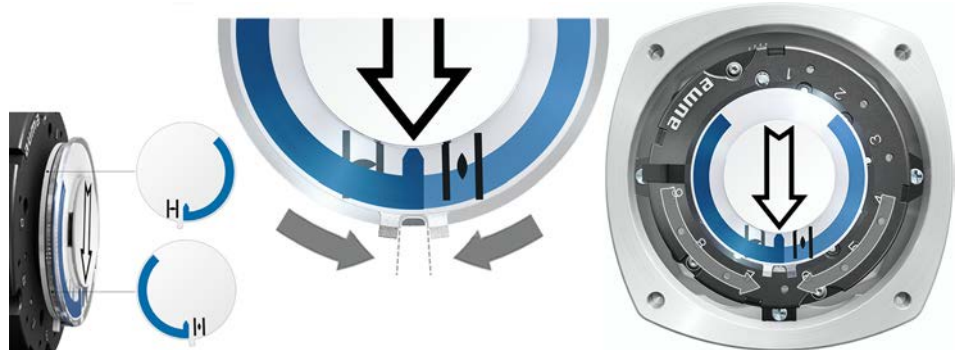

3. Move actuator to end position OPEN.
- ➔ The arrow \Rightarrow rotates in direction OPEN driving the indicator disc with symbol \equiv (OPEN) until the actuator stops in position OPEN.

Figure 81: Operation in direction OPEN (left) and position OPEN (right)



4. Check settings:
 - ➔ The setting of the mechanical position indicator is correct if the angle between the symbols  (OPEN) and  (CLOSED) ranges between approx. 120° and 280°.
 - ➔ If all three discs are turned at the same time, the indicator can be shifted in steps of 15°. Individual shifts of 5° are possible.
 - ➔ If the indicator is rotated too far (more than 280°) or if the angle is too small (below 120°), adapt the gear stage setting to the actuator turns/stroke. Refer to <Gear stage of the reduction gearing: test/set>.

11.2.2. Gear stage of the reduction gearing: test/set

The test/setting is only required if the mechanical position indicator cannot be correctly set.

1. Refer to table and check if turns/stroke correspond to the setting of the reduction gearing (stages 1– 9).

Table 23:

Turns of actuator per valve stroke and suitable reduction gearing setting		
for 1 – 500 turns/stroke [exceeding – to]	for 10 – 5,000 turns/stroke [exceeding – to]	Reduction gearing Stage
1.0 – 1.9	10 – 19	1
1.9 – 3.7	19 – 37	2
3.7 – 7.9	37 – 79	3
7.9 – 15.0	79 – 150	4
15.0 – 31.5	150 – 315	5
31.5 – 60.0	315 – 600	6
60.0 – 126	600 – 1,260	7
126 – 240	1,260 – 2,400	8
240 – 500	2,400 – 5,000	9

2. To modify settings, lift the lever at the reduction gearing and engage at the selected stage.



Figure 82: Set reduction gearing



11.3. Mechanical position indication via indicator mark (not self-adjusting)

Figure 83: Mechanical position indication via indicator mark




The mechanical position indicator shows the valve position via two indicator discs with symbols  (OPEN) and  (CLOSED). When correctly set, the symbols OPEN/CLOSED point to the indicator mark ▲ at the cover in the end positions.


Setting elements

The position indications is housed in the actuator switch compartment. The switch compartment must be opened to perform any settings. Refer to <Switch compartment: open/close>.


11.3.1. Mechanical position indicator: set

1. Move valve to end position CLOSED.
2. Turn lower indicator disc until symbol  (CLOSED) is in alignment with the ▲ mark on the cover.



3. Move actuator to end position OPEN.
4. Hold lower indicator disc in position and turn upper disc with symbol  (OPEN) until it is in alignment with the ▲ mark on the cover.



5. Move valve to end position CLOSED again.
6. Check settings:
 - If the symbol  (CLOSED) is no longer in alignment with ▲ mark on the cover:
 - 6.1 Repeat setting procedure.
 - 6.2 Test/set gear stage of the reduction gearing.


11.3.2. Gear stage of the reduction gearing: test/set

This test/setting is only required if the turns/stroke of the actuator were changed at a later date. The control unit may possibly have to be exchanged:

Information

The adjustable stroke range is indicated on the order data sheet (e.g. "1 – 500 turns/stroke").

1. Pull off indicator disc using a spanner as lever if required.

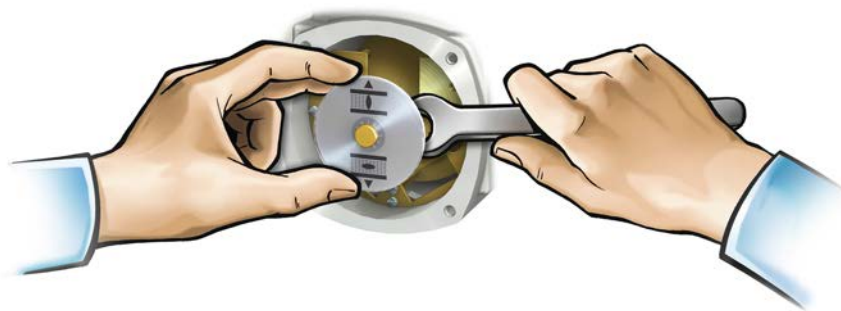

2. Refer to table and check if turns/stroke of the actuator correspond to the setting of the reduction gearing (stages 1– 9).
If the setting is **not correct**: continue with step 3.
If the setting is correct: continue with step 6.

Table 24:


MS5.2 control unit (1 to 500 turns per stroke)	
Turns/stroke above – to	Gear stage
1.0 – 1.9	1
1.9 – 3.9	2
3.9 – 7.8	3
7.8 – 15.6	4
15.6 – 31.5	5
31.5 – 62.5	6
62.5 – 125	7
125 – 250	8
250 – 500	9

Table 25:

MS50.2 control unit (10 to 5,000 turns per stroke)	
Turns/stroke above – to	Gear stage
10.0 – 19.5	1
19.5 – 39.0	2
39.0 – 78.0	3
78 – 156	4
156 – 315	5
315 – 625	6
625 – 1,250	7
1,250 – 2,500	8
2,500 – 5,000	9

3. Loosen screw [1].
4. Set crown wheel [2] to desired stage according to table.
5. Tighten screw [1].
6. Place indicator disc on shaft.
7. Set mechanical position indicator.

Figure 84: Control unit with reduction gearing

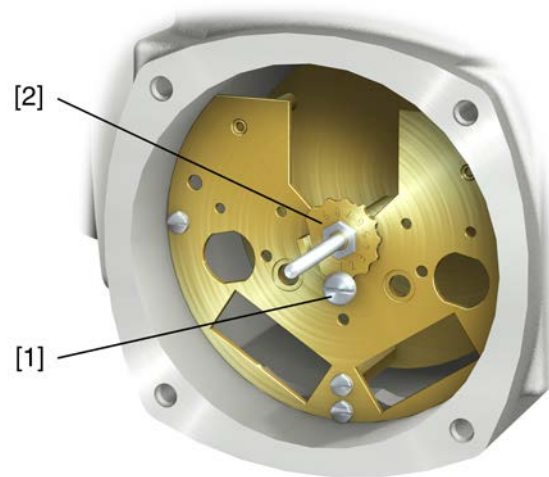

- [1] Screw
- [2] Crown wheel

12. Corrective action

12.1. Faults during commissioning

Table 26:

Faults during operation/commissioning		
Fault	Description/cause	Remedy
Mechanical position indicator cannot be set.	Reduction gearing is not suitable for turns/stroke of the actuator.	Set gear stage of the reduction gearing. The control unit might have to be exchanged.
In spite of correct setting of mechanical limit switching, actuator operates into the valve or actuator end position.	The overrun was not considered when setting the limit switching. The overrun is generated by the inertia of both the actuator and the valve and the delay time of the actuator controls.	<ul style="list-style-type: none"> Determine overrun: Overrun = travel covered from switching off until complete standstill. Set limit switching again considering the overrun. (Turn handwheel back by the amount of the overrun)
Handwheel rotates on the shaft without transmitting torque.	Actuator in version with overload protection for manual operation: Shear pin rupture due to excessive torque at handwheel.	Dismount handwheel. Replace overload protection and remount handwheel.
Actuator operation is too fast or too slow.	Speed setting is incorrect.	Change speed.
Actuator suddenly stops in end positions.	Speed reduction switched off or incorrectly set before reaching end positions.	Set speed reduction.

12.2. Fault indications and warning indications

Faults interrupt or prevent the electrical actuator operation. In the event of a fault, the display backlight is red.

Warnings have no influence on the electrical actuator operation. They only serve for information purposes. The display remains white.






Collective signals include further indications. They can be displayed via the  **Details** push button. The display remains white.

Table 27:

Faults and warnings via status indications in the display		
Indication on display	Description/cause	Remedy
S0001	Instead of the valve position, a status text is displayed.	For a description of the status texts, refer to Manual (Operation and setting).
S0005 Warnings	Collective signal 02: Indicates the number of active warnings.	For indicated value > 0: Press push button  Details . For details, refer to <Warnings and Out of specification> table.
S0006 Not ready REMOTE	Collective signal 04: Indicates the number of active signals.	For indicated value > 0: Press push button  Details . For details, refer to <Not ready REMOTE and Function check> table.
S0007 Fault	Collective signal 03: Indicates the number of active faults. The actuator cannot be operated.	For indicated value > 0: Press push button  Details to display a list of detailed indications. For details, refer to <Faults and Failure> table.
S0008 Out of specification	Collective signal 07: Indication according to NAMUR recommendation NE 107 Actuator is operated outside the normal operation conditions.	For indicated value > 0: Press push button  Details . For details, refer to <Warnings and Out of specification> table.




Faults and warnings via status indications in the display		
Indication on display	Description/cause	Remedy
S0009 Function check	Collective signal 08: Indication according to NAMUR recommendation NE 107 The actuator is being worked on; output signals are temporarily invalid.	For indicated value > 0: Press push button Details. For details, refer to <Not ready REMOTE and Function check> table.
S0010 Maintenance required	Collective signal 09: Indication according to NAMUR recommendation NE 107 Recommendation to perform maintenance.	For indicated value > 0: Press push button Details to display a list of detailed indications.
S0011 Failure	Collective signal 10: Indication according to NAMUR recommendation NE 107 Actuator function failure, output signals are invalid	For indicated value > 0: Press push button Details to display a list of detailed indications. For details, refer to <Faults and Failure> table.

Table 28:

Warnings and Out of specification		
Indication on display	Description/cause	Remedy
Config. warning	Collective signal 06: Possible cause: Configuration setting is incorrect. The device can still be operated with restrictions.	Press push button Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Internal warning	Collective signal 15: Device warnings The device can still be operated with restrictions.	Press push button Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
24 V DC external	The external 24 V DC voltage supply of the controls has exceeded the power supply limits.	Check 24 V DC voltage supply.
Wrn op.mode run time	Warning on time max. running time/h exceeded	<ul style="list-style-type: none"> Check modulating behaviour of actuator. Check parameter Perm. run time M0356, re-set if required.
Wrn op.mode starts	Warning on time max. number of motor starts (starts) exceeded	<ul style="list-style-type: none"> Check modulating behaviour of actuator. Check parameter Permissible starts M0357, re-set if required.
Failure behav. active	The failure behaviour is active since all required setpoints and actual values are incorrect.	Verify signals: <ul style="list-style-type: none"> Setpoint E1 Actual value E2 Actual process value E4 Check connection to master.
Wrn input AIN 1	Warning: Loss of signal analogue input 1	Check wiring.
Wrn input AIN 2	Warning: Loss of signal analogue input 2	Check wiring.
Wrn setpoint position	Warning: Loss of signal setpoint position Possible causes: For an adjusted setpoint range of e.g. 4 – 20 mA, the input signal is 0 (signal loss). For a setpoint range of 0 – 20 mA, monitoring is not possible.	Check setpoint signal.
Op. time warning	The set time (parameter Perm.op. time, manual M0570) has been exceeded. The preset operating time is exceeded for a complete travel from end position OPEN to end position CLOSED.	The warning indications are automatically cleared once a new operation command is executed. <ul style="list-style-type: none"> Check valve. Check parameter Perm.op. time, manual M0570.
Wrn controls temp.	Temperature within controls housing too high.	Measure/reduce ambient temperature.
Time not set	Real time clock has not yet been set.	Set time.
RTC voltage	Voltage of the RTC button cell is too low.	Replace button cell.
PVST fault	Partial Valve Stroke Test (PVST) could not be successfully completed.	Check actuator (PVST settings).

Warnings and Out of specification		
Indication on display	Description/cause	Remedy
PVST abort	Partial Valve Stroke Test (PVST) was aborted or could not be started.	Perform RESET or restart PVST.
Wrn no reaction	No actuator reaction to operation commands within the set reaction time.	<ul style="list-style-type: none"> Check movement at actuator. Check parameter Reaction time M0634.
Torque wrn OPEN	Limit value for torque warning in direction OPEN exceeded.	Check parameter Wrn torque OPEN M0768 , re-set if required.
Torque wrn CLOSE	Limit value for torque warning in direction CLOSE exceeded.	Check parameter Wrn torque CLOSE M0769 , re-set if required.
PVST required	Execution of PVST (Partial Valve Stroke Tests) is required.	
Maintenance required	Maintenance is required.	


Table 29:

Faults and Failure		
Indication on display	Description/cause	Remedy
Configuration error	Collective signal 11: Configuration error has occurred.	Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Config. error REMOTE	Collective signal 22: Configuration error has occurred.	Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Internal error	Collective signal 14: Internal error has occurred.	AUMA service Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Torque fault CLOSE	Torque fault in direction CLOSE	Perform one of the following measures: <ul style="list-style-type: none"> Issue operation command in direction OPEN. Set selector switch to position Local control (LOCAL) and reset fault indication via push button RESET. Execute reset command via fieldbus.
Torque fault OPEN	Torque fault in direction OPEN	Perform one of the following measures: <ul style="list-style-type: none"> Issue operation command in direction CLOSE. Set selector switch to position Local control (LOCAL) and reset fault indication via push button RESET. Execute reset command via fieldbus.
Phase fault	<ul style="list-style-type: none"> When connecting to a 3-ph AC system and with internal 24 V DC supply of the electronics: Phase 2 is missing. When connecting to a 3-ph AC system: One of the phases L1, L2 or L3 is missing. 	Test/connect phases.
Thermal fault	Motor protection tripped	<ul style="list-style-type: none"> Cool down, wait. If the fault indication display persists after cooling down: <ul style="list-style-type: none"> Set selector switch to position Local control (LOCAL) and reset fault indication via push button RESET. Execute reset command via fieldbus. Check fuses.
Fault no reaction	No actuator reaction to operation commands within the set reaction time.	Check movement at actuator.
Poti Out of Range	Potentiometer is outside the permissible range.	Check device configuration: Parameter Low limit Uspan M0832 must be less than parameter Volt.level diff. potent. M0833 .

Faults and Failure		
Indication on display	Description/cause	Remedy
Wrn input AIN 1	Loss of signal analogue input 1	Check wiring.
Wrn input AIN 2	Loss of signal analogue input 2	Check wiring.
Incorrect rotary direct.	Contrary to the configured direction of rotation and the active operation command, the motor turns into the wrong direction.	Check operation command control. For 3-phase AC current mains, activate phase monitoring (parameter Adapt rotary dir. M0171). Check device configuration setting (parameter Closing rotation M0176). To delete the fault indication: Disconnect actuator controls from the mains and perform reboot.
Rectifier fault	Motor protection: Fault within converter	
DMF fault OPEN ¹⁾	The torque in direction OPEN, measured at the output drive shaft using the torque measurement flange, is too high.	Check DMF trip torque OP parameter. Check DMF fault level parameter.
DMF fault CLOSE ¹⁾	The torque in direction CLOSE, measured at the output drive shaft using the torque measurement flange, is too high.	Check DMF trip torque CL parameter. Check DMF fault level parameter.

1) For actuators equipped with torque measurement flange (DMF)

Table 30:

Not ready REMOTE and Function check (collective signal 04)		
Indication on display	Description/cause	Remedy
Wrong oper. cmd	Collective signal 13: Possible causes: <ul style="list-style-type: none"> Several operation commands (e.g. OPEN and CLOSE simultaneously, or OPEN and SET-POINT operation simultaneously) A setpoint is present and the positioner is not active 	<ul style="list-style-type: none"> Check operation commands (reset/clear all operation commands and send one operation command only). Set parameter Positioner to Function active. Check setpoint. Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Sel. sw. not REMOTE	Selector switch is not in position REMOTE.	Set selector switch to position REMOTE.
Service active	Operation via service interface (Bluetooth) and AUMA CDT service software.	Exit service software.
Disabled	Actuator is in operation mode Disabled.	Check setting and status of function <Local controls enable>.
EMCY stop active	The EMERGENCY stop switch has been operated. The motor control power supply (contactors or thyristors) is disconnected.	<ul style="list-style-type: none"> Enable EMERGENCY stop switch. Reset EMERGENCY stop state by means of Reset command.
EMCY behav. active	Operation mode EMERGENCY is active (EMERGENCY signal was sent). 0 V are applied at the EMERGENCY input.	<ul style="list-style-type: none"> Detect cause for EMERGENCY signal. Verify failure source. Apply +24 V DC at EMERGENCY input.
I/O interface	The actuator is controlled via the I/O interface (parallel).	Check I/O interface.
Handwheel active	Manual operation is activated.	Start motor operation.
FailState fieldbus	Fieldbus connection available, however no process data transmission by the master.	Verify master configuration
Interlock	An interlock is active.	Check interlock signal.
Interlock by-pass	By-pass function is interlocked.	Check states of main and by-pass valve.
PVST active	Partial Valve Stroke Test (PVST) is active.	Wait until PVST function is complete.

12.3. Fuses

12.3.1. Fuses within the actuator controls

F5 Automatic reset fuse as short-circuit protection for external 24 V DC supply for customer (refer to wiring diagram)

12.3.2. Motor protection (thermal monitoring)

In order to protect against overheating and impermissibly high surface temperatures at the actuator, PTC thermistors or thermoswitches are embedded in the motor winding. Motor protection trips as soon as the max. permissible winding temperature has been reached.

The actuator is switched off and the following signals are given:

- LED 3 (motor protection tripped) on the local controls is illuminated.
- The status indications **S0007** or **S0011 Failure** display a fault.
The fault **Details** is displayed when selecting **Thermal fault**.


The motor has to cool down before operation can be resumed.

Depending on the parameter setting (motor protection behaviour), the fault signal is either automatically reset or the fault signal has to be acknowledged.

The acknowledgement is made:

- in selector switch position **Local control** (LOCAL) via push button **RESET**.
- In selector switch position **Remote control** (REMOTE) with Reset command via fieldbus.

13. Servicing and maintenance



Damage caused by inappropriate maintenance!

- Servicing and maintenance must be carried out exclusively by suitably qualified personnel having been authorised by the end user or the contractor of the plant. Therefore, we recommend contacting our service.
- Only perform servicing and maintenance tasks when the device is switched off.

AUMA Service & Support


AUMA offers extensive service such as servicing and maintenance as well as customer product training. For the contact addresses, refer to our website (www.auma.com).

13.1. Preventive measures for servicing and safe operation

The following actions are required to ensure safe device operation:

6 months after commissioning and then once a year

- Carry out visual inspection:
Cable entries, cable glands, screw plugs, blanking plugs, etc. have to be checked for correct fit and sealing. If required, tighten cable glands and blanking plugs with torque in compliance with the manufacturer's specifications.
Check actuator for damage as well as for grease or oil leakage.
- When deployed in areas where dust formation represents a potential explosion hazard, perform visual inspection for deposit of dirt or dust on a regular basis. Clean devices if required.
- Check fastening screws between actuator and gearbox/valve for tightness. If required, fasten screws while applying the tightening torques as indicated in chapter <Assembly>.
- When rarely operated: Perform test run.
- For devices with output drive type A: Press in Lithium soap EP multi-purpose grease on mineral oil base at the grease nipple with a grease gun.
Figure 85: Output drive type A

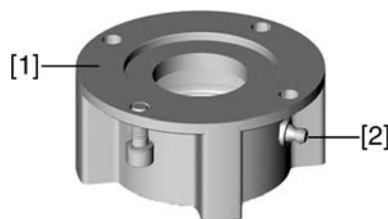

- [1] Output drive type A
- [2] Grease nipple

- Lubrication of the valve stem must be done separately.
Exception: For output drive type A in version with stem lubrication (option), the stem is lubricated together with the output drive. If the valve manufacturer interval specifications are shorter for lubricating the valve, the shorter lubrication intervals of the valve manufacturer apply.

Table 31:

Grease quantities for bearing of output drive type A				
Output drive type	A 07.2	A 10.2	A 14.2	A 16.2
Quantity [g] ¹⁾	1.5	3	5	10

1) For grease with density $\rho = 0.9 \text{ kg/dm}^3$

13.2. Maintenance

Manual operation During maintenance, the mechanical parts of the handwheel activation, in particular motor coupling and retaining spring, must be checked. Replace the parts in case of visible wear.

- Lubrication**
- In the factory, the gear housing is filled with grease.
 - Additional lubrication of the gear housing is not required during operation.
 - Grease change is performed during maintenance
 - Generally after 4 to 6 years for modulating duty.
 - Generally after 6 to 8 years if operated frequently (open-close duty).
 - Generally after 10 to 12 years if operated infrequently (open-close duty).
 - We recommend replacing the seals when changing the grease.

13.3. Disposal and recycling

Our devices have a long lifetime. However, they have to be replaced at one point in time. The devices have a modular design and may, therefore, easily be separated and sorted according to materials used, i.e.:

- Electronic scrap
- Various metals
- Plastic materials
- Greases and oils

The following generally applies:

- Greases and oils are hazardous to water and must not be released into the environment.
- Arrange for controlled waste disposal of the disassembled material or for separate recycling according to materials.
- Observe the national regulations for waste disposal.

14. Technical data

Information The following tables include standard and optional features. For detailed information on the customer-specific version, refer to the order-related data sheet. The technical data sheet can be downloaded from the Internet in both German and English at <http://www.auma.com> (please state the order number).

14.1. Technical data Multi-turn actuators

Features and functions		
Type of duty (Multi-turn actuators for open-close duty)	Standard:	Short-time duty S2 - 15 min, classes A and B according to EN 15714-2
	Option:	Short-time duty S2 - 30 min, classes A and B according to EN 15714-2
	For 100 % nominal voltage and +40 °C ambient temperature and at run torque load at maximum output speed.	
Type of duty (Multi-turn actuators for modulating duty)	Standard:	Intermittent duty S4 - 25 %, class C according to EN 15714-2
	Option:	Intermittent duty S4 - 50 %, class C according to EN 15714-2
	For 100 % nominal voltage and +40 °C ambient temperature and at modulating torque load.	
Motors	3-phase AC asynchronous motor, type IM B9 according to IEC 60034-7, IC410 cooling procedure according to IEC 60034-6	
Mains voltage, mains frequency	Refer to name plate of ACV actuator controls Permissible variation of mains voltage: ±10 % Permissible variation of mains frequency: ±5 %	
Overvoltage category	Category III according to IEC 60364-4-443	
Insulation class	Standard:	F, tropicalized
	Option:	H, tropicalized
Motor protection	Thermoswitches (NC)	
Self-locking	Self-locking: Speed ranges 6 – 60 rpm and 12 – 120 rpm	
	NOT self-locking: Speed range variant 24 – 240 rpm	
	Applications of NON self-locking speed variants with pulling loads (like protective weirs, fishbelly flap gates and sluice gates, etc.) on request.	
Motor heater (option)	Multi-turn actuators are self-locking if the valve position cannot be changed from standstill while torque acts upon the output drive.	
	Voltages:	110 – 120 V AC, 220 – 240 V AC or 380 – 480 V AC
	Power depending on the size 12.5 – 25 W	
Manual operation	Manual drive for setting and emergency operation, handwheel does not rotate during electrical operation.	
	Option:	Handwheel lockable Handwheel stem extension Power tool for emergency operation with square 30 mm or 50 mm
	Indication whether manual operation is active/not active via single switch (1 change-over contact)	
Electrical connection	Standard:	AUMA plug/socket connector with screw-type connection
	Option:	Terminals or crimp connection Gold-plated control plug (sockets and plugs)
Threads for cable entries	Standard:	Metric threads
	Option:	Pg-threads, NPT-threads, G-threads
Terminal plan	Terminal plan according to order number enclosed with delivery	
Valve attachment	Standard:	B1 according to EN ISO 5210
	Option:	A, B2, B3, B4 according to EN ISO 5210 A, B, D, E according to DIN 3210 C according to DIN 3338
	Special valve attachments: AF, AK, AG, B3D, ED, DD, IB1, IB3	
	A prepared for permanent lubrication of stem	

Electromechanical control unit	
Limit switching	Counter gear mechanism for end positions OPEN and CLOSED Turns per stroke: 2 to 500 (standard) or 2 to 5,000 (option)
	Standard: Single switch (1 NC and 1 NO) for each end position, not galvanically isolated
	Options: Tandem switch (2 NC and 2 NO) for each end position, switches galvanically isolated Triple switch (3 NC and 3 NO) for each end position, switches galvanically isolated Intermediate position switches (DUO limit switching), adjustable for each direction of operation
Torque switching	Torque switching adjustable for directions OPEN and CLOSE
	Standard: Single switch (1 NC and 1 NO) silver contact (Ag) for each direction, not galvanically isolated
	Options: Tandem switch (2 NC and 2 NO) for each direction, switches galvanically isolated
Switch contact material	Standard: Silver (Ag)
	Options: Gold (Au), recommended for low voltage actuator controls
Position feedback signal, analogue (option)	Potentiometer or 0/4 – 20 mA (electronic position transmitter)
Mechanical position indicator (option)	Continuous indication, adjustable indicator disc with symbols OPEN and CLOSED
Running indication	Blinker transmitter (option for modulating actuators)
Heater in switch compartment	Resistance type heater with 5 W, 24 V AC
Electronic control unit	
Non-Intrusive setting	Magnetic limit and torque transmitter (MWG) Turns per stroke: 1 to 500 (standard) or 10 to 5,000 (option)
Position feedback signal	Via actuator controls
Torque feedback signal	Via actuator controls
Mechanical position indicator	Continuous self-adjusting indication with symbols OPEN and CLOSED
Running indication	Blinking signal via actuator controls
Heater in switch compartment	Resistance type heater with 5 W, 24 V AC
Service conditions	
Use	Indoor and outdoor use permissible
Mounting position	Any position
Installation altitude	≤ 2 000 m above sea level > 2,000 m above sea level on request
Ambient temperature	Standard: –30 °C to +70 °C
	Options: –40 °C to +70 °C –60 °C to +60 °C
	For exact version, refer to actuator name plate.
Humidity	Up to 100 % relative humidity across the entire permissible temperature range
Enclosure protection according to EN 60529	Standard: IP68 with AUMA 3-phase AC motor For special motors differing enclosure protection available (refer to motor name plate)
	Option: DS terminal compartment additionally sealed against interior of actuator (double sealed)
	According to AUMA definition, enclosure protection IP68 meets the following requirements: <ul style="list-style-type: none"> • Depth of water: maximum 8 m head of water • Duration of continuous immersion in water: Max. 96 hours • Up to 10 operations during immersion • Modulating duty is not possible during immersion.
	For exact version, refer to actuator name plate.
Pollution degree according to IEC 60664-1	Pollution degree 4 (when closed), pollution degree 2 (internal)

Service conditions		
Corrosion protection	Standard:	KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution.
	Option:	KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution.
Coating	Double layer powder coating Two-component iron-mica combination	
Colour	Standard:	AUMA silver-grey (similar to RAL 7037)
	Option:	Available colours on request
Lifetime	AUMA multi-turn actuators meet or exceed the lifetime requirements of EN 15714-2. Detailed information can be provided on request.	
Noise level	< 72 dB (A)	

14.2. Technical data Actuator controls

General information

ACV 01.2 actuator controls for controlling actuators with variable speed or operating times of the SAV/SARV .2 and SQV/SQRV .2 type range .

Features and functions

Power supply	Standard voltages AC:									
	3-phase AC Voltages/frequencies					1-phase AC Voltages/frequencies				
	Volt	220 – 240		380 – 480		Volt	110 – 120		220 – 240	
	Hz	50	60	50	60	Hz	50	60	50	60
	Permissible variation of mains frequency: ±5 %									
	Permissible variation of mains voltage: ±10 %									
External supply of the electronics (option)	–30 % for maximum 10 seconds within a range of 380 V – 480 V with the following restrictions:									
	<ul style="list-style-type: none">• If required, the motor speed will be reduced down to nominal speed depending on the load of the actuators used									
	<ul style="list-style-type: none">• A low mains voltage increases the mains current consumption; a higher mains voltage reduces the mains current consumption									
	<ul style="list-style-type: none">• The torque limits of the actuators used might be decreased for a short time, if applicable									
Rated power	24 V DC: +20 % / –15 %									
	Current consumption: Basic version approx. 250 mA, with options up to 500 mA									
Control voltage/current consumption for control inputs	For external electronics supply, the power supply of integral controls must have an enhanced isolation against mains voltage in compliance with IEC 61010-1 and the output power be limited to 150 VA.									
	Standard	24 V DC, current consumption: approx. 10 mA per input								
	Options:	48 V DC, current consumption: approx. 7 mA per input								
		60 V DC, current consumption: approx. 9 mA per input								
100 – 125 V DC, current consumption: approx. 15 mA per input										
Local controls	100 – 120 V AC, current consumption : approx. 15 mA per input									
	All input signals must be supplied with the same potential.									
	Standard:	<ul style="list-style-type: none">• Selector switch: LOCAL - OFF - REMOTE (lockable in all three positions)• Push buttons: OPEN, STOP, CLOSE, RESET<ul style="list-style-type: none">- Local STOPThe actuator can be stopped via push button STOP of local controls if the selector switch is in position REMOTE.• 6 indication lights:<ul style="list-style-type: none">- End position and running indication CLOSED (yellow), torque fault CLOSE (red), motor protection tripped (red), torque fault OPEN (red), end position and running indication OPEN (green), Bluetooth (blue)• Graphic LC display: illuminated								
Local controls	Option:	<ul style="list-style-type: none">• Special colours for the indication lights:<ul style="list-style-type: none">- End position CLOSED (green), torque fault CLOSE (blue), torque fault OPEN (yellow), motor protection tripped (violet), end position OPEN (red)								

Features and functions		
Bluetooth Communication interface	Bluetooth class II chip, version 2.1: With a range up to 10 m in industrial environments; supports the SSP Bluetooth profile (Serial Port Profile). Required accessories: <ul style="list-style-type: none"> • AUMA CDT (Commissioning and Diagnostic Tool for Windows-based PC) • AUMA Assistant App (Commissioning and Diagnostic Tool) 	
Application functions	Standard: <ul style="list-style-type: none"> • Selectable type of seating, limit or torque seating for end position OPEN and end position CLOSED • Torque by-pass: Adjustable duration (with adjustable peak torque during start-up time) • Start and end of stepping mode as well as ON and OFF times can be set individually for directions OPEN and CLOSE, 1 to 1,800 seconds • Operation profile with any 8 intermediate positions: Position can be set between 0 and 100 %, reaction and signal behaviour programmable • Velocity profile with up to 10 ranges, velocity can be individually adjusted for positions OPEN and CLOSED for each range • Running indication blinking: can be set • Speed/operating time source can be selected (REMOTE, LOCAL) • 4 internal nominal speeds or operating times can be programmed (and selected in LOCAL) • Soft start, soft stop with velocity reduction (adjustable) Options: <ul style="list-style-type: none"> • PID process controller: with adaptive positioner, via 0/4 – 20 mA analogue inputs for process setpoint and actual process value • Multiport valve: Up to 16 positions, signals (pulse or edge) (SAV/SARV .2 only) • Lift Plug Valve: In combination with multiport valve (SAV/SARV. 2 only) • Automatic deblocking: Up to 5 operation trials, travel time in opposite direction can be set • Static and dynamic torque recording for both rotation directions with torque measurement flange as additional accessory 	
Monitoring function	<ul style="list-style-type: none"> • Valve overload protection: Adjustable, results in switching off and generates fault signal • Motor temperature monitoring (thermal monitoring): Results in switching off and generates fault signal • Monitoring the heater within actuator: Generates warning signal • Monitoring of permissible on-time and number of starts: Adjustable, generates warning signal • Operating time monitoring: Adjustable, generates warning signal • Phase failure monitoring: Results in switching off and generates fault signal 	
Diagnostic functions	<ul style="list-style-type: none"> • Electronic device ID with order and product data • Operating data logging: A resettable counter and a lifetime counter each for: <ul style="list-style-type: none"> - Motor running time, number of starts, torque switch trippings in end position CLOSED, limit switch trippings in end position CLOSED, torque switch trippings in end position OPEN, limit switch trippings in end position OPEN, torque faults CLOSE, torque faults OPEN, motor protection trippings • Time-stamped event report with history for setting, operation and faults: <ul style="list-style-type: none"> - Status signals according to NAMUR recommendation NE 107: "Failure", "Function check", "Out of specification", "Maintenance required" • Torque characteristics (for version with MWG in actuator): <ul style="list-style-type: none"> - 3 torque characteristics (torque-travel characteristic) for opening and closing directions can be saved separately - Torque characteristics stored can be shown on the display. 	
Motor protection evaluation	Standard:	Monitoring the motor temperature in combination with thermoswitches within actuator motor
	Option:	PTC tripping device (TMS module) in combination with PTC thermistors within actuator motor
Electrical connection	Standard:	AUMA plug/socket connector with screw-type connection
	Options:	<ul style="list-style-type: none"> • Terminals or crimp connection • Gold-plated control contacts (pins and sockets)
Threads for cable entries	Standard:	Metric threads
	Options:	Pg-threads, NPT-threads, G-threads
Wiring diagram	Refer to name plate	

For version with MWG within actuator

Setting of limit and torque switching via local controls

Torque feedback signal	Galvanically isolated analogue output 0/4 – 20 mA (load max. 500 Ω).
Wiring diagram (basic version)	TPCHA000-1AF-A000 TPA00R100-0I1-000, 3-ph; 380 V – 480 V TPCHA000-1AE-A000 TPA00R100-0I1-000, 1-ph; 220 V – 240 V

Settings/programming the EtherNet/IP interface

Setting the EtherNet/IP module
Setting is performed via a Windows tool or DHCP
Default settings of the IP interface:

IP Address Selection

Address Type	Static IP
Static IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Default gateway	192.168.0.1

Service conditions

Use	Indoor and outdoor use permissible
Mounting position	Any position
Installation altitude	≤ 2 000 m above sea level > 2,000 m above sea level on request
Ambient temperature	Refer to name plate of actuator controls
Humidity	Up to 100 % relative humidity across the entire permissible temperature range
Enclosure protection in accordance with IEC 60529	Standard: IP68 Option: DS terminal compartment additionally sealed against interior of actuator controls (double sealed) According to AUMA definition, enclosure protection IP68 meets the following requirements: <ul style="list-style-type: none"> • Depth of water: maximum 8 m head of water • Continuous immersion in water: maximal 96 hours • Up to 10 operations during immersion • Modulating duty is not possible during immersion. For exact version, refer to actuator controls name plate.
Pollution degree according to IEC 60664-1	Pollution degree 4 (when closed), pollution degree 2 (internal)
Vibration resistance according to IEC 60068-2-6	Resistance against vibration can be given on request
Corrosion protection	Standard: KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution. Option: KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution.
Coating	Double layer powder coating Two-component iron-mica combination
Colour	Standard: AUMA silver-grey (similar to RAL 7037) Option: Available colours on request

Accessories

Wall bracket	For actuator controls mounted separately from the actuator, including plug/socket connector. Connecting cable on request. Recommended for high ambient temperatures, difficult access, or in case of heavy vibration during service. Cable length between actuator and actuator controls is max. 16 m. Longer cables require an external filter (filter available on request).
Programming software	AUMA CDT (Commissioning and Diagnostic Tool for Windows-based PC) AUMA Assistant App (Commissioning and Diagnostic Tool)

Further information	
Weight	Approx. 7 kg (with AUMA plug/socket connector)
EU Directives	Machinery Directive 2006/42/EC Low Voltage Directive 2014/35/EU EMC Directive 2014/30/EU RoHS Directive 2011/65/EU RED Directive 2014/53/EU
Reference documents	Electrical data SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2 Electrical data SQV 05.2 – SQV 14.2/SQVR 05.2 – SQVR 14.2


14.3. Tightening torques for screws

Table 32:

Tightening torques for screws		
Threads	Tightening torque [Nm]	
	Strength class	
	A2-70/A4-70	A2-80/A4-80
M6	7.4	10
M8	18	24
M10	36	48
M12	61	82
M16	150	200
M20	294	392
M30	1,015	1,057
M36	1,769	2,121

15. Spare parts

15.1. Multi-turn actuators SAV 07.2 – SAV 16.2/SARV 07.2 – SARV 16.2

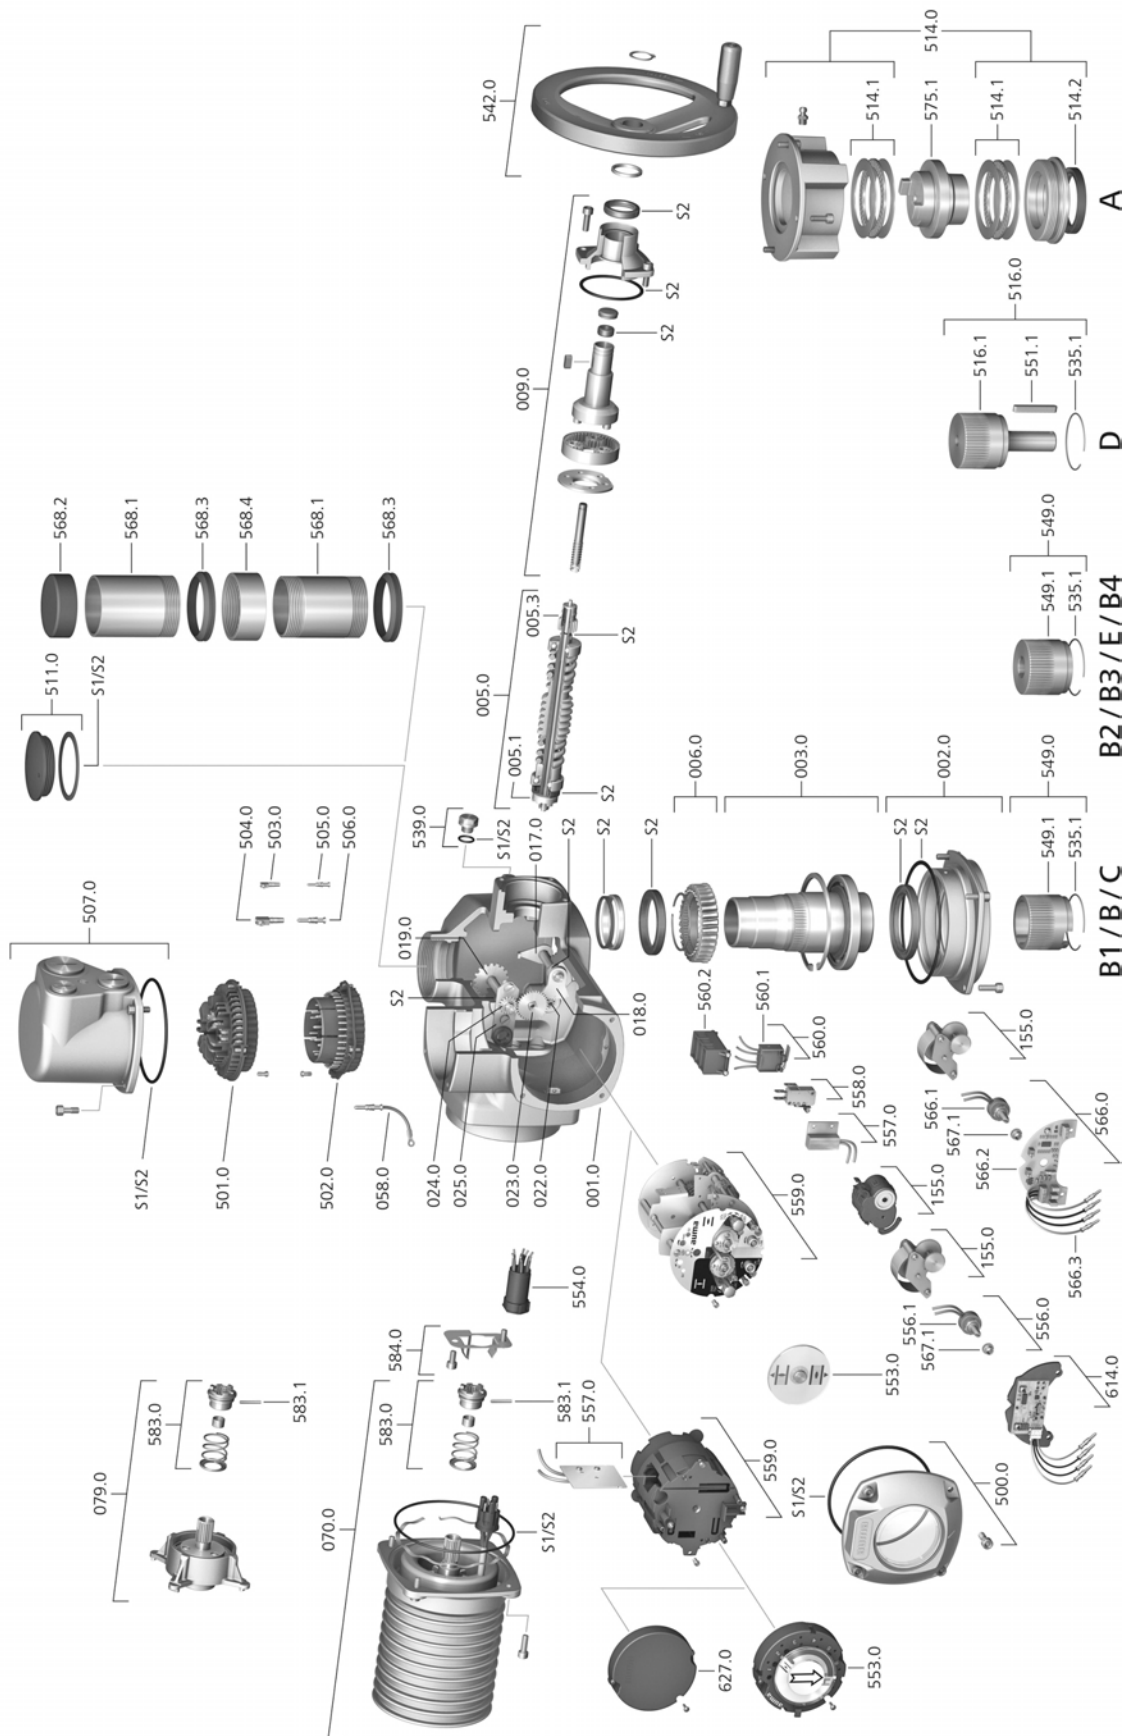


Spare parts

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type	Ref. no.	Designation	Type
001.0	Housing	Sub-assembly	542.0	Handwheel with ball handle	Sub-assembly
002.0	Bearing flange	Sub-assembly	549.0	Output drive types B/B1/B2/B3/B4/C/E	Sub-assembly
003.0	Hollow shaft	Sub-assembly	549.1	Output drive sleeve B/B1/B2/B3/B4/C/E	Sub-assembly
005.0	Drive shaft	Sub-assembly	551.1	Parallel key	
005.1	Motor coupling		553.0	Mechanical position indicator	Sub-assembly
005.3	Manual drive coupling		554.0	Socket carrier for motor plug/socket connector with cable harness	Sub-assembly
006.0	Worm wheel		556.0	Potentiometer as position transmitter	Sub-assembly
009.0	Manual gearing	Sub-assembly	556.1	Potentiometer without slip clutch	Sub-assembly
017.0	Torque lever	Sub-assembly	557.0	Heater	
018.0	Gear segment		558.0	Blinker transmitter including pins at wires (without impulse disc and insulation plate)	Sub-assembly
019.0	Crown wheel		559.0–1	Electromechanical control unit with switches, including torque switching heads	Sub-assembly
022.0	Drive pinion II for torque switching	Sub-assembly	559.0–2	Electronic control unit with magnetic limit and torque transmitter (MWG)	Sub-assembly
023.0	Output drive wheel for limit switching	Sub-assembly	560.0–1	Switch stack for direction OPEN	Sub-assembly
024.0	Drive wheel for limit switching	Sub-assembly	560.0–2	Switch stack for direction CLOSE	Sub-assembly
025.0	Locking plate	Sub-assembly	560.1	Switch for limit/torque	Sub-assembly
058.0	Cable for protective earth	Sub-assembly	560.2–1	Switch case for direction OPEN	
070.0	Motor (only for V... motors incl. ref. no. 079.0)	Sub-assembly	560.2–2	Switch case for direction CLOSE	
079.0	Planetary gearing for motor drive (only for V... motors)	Sub-assembly	566.0	RWG position transmitter	Sub-assembly
155.0	Reduction gearing	Sub-assembly	566.1	Potentiometer for RWG without slip clutch	Sub-assembly
500.0	Cover	Sub-assembly	566.2	Position transmitter board for RWG	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly	566.3	Cable set for RWG	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly	567.1	Slip clutch for potentiometer	Sub-assembly
503.0	Socket for controls	Sub-assembly	568.1	Stem protection tube (without cap)	
504.0	Socket for motor	Sub-assembly	568.2	Protective cap for stem protection tube	
505.0	Pin for controls	Sub-assembly	568.3	V-seal	
506.0	Pin for motor	Sub-assembly	568.4	Threaded sleeve	
507.0	Cover for electrical connection	Sub-assembly	575.1	Stem nut for output drive type A	
511.0	Threaded plug	Sub-assembly	583.0	Motor coupling on motor shaft	Sub-assembly
514.0	Output drive type A (without stem nut)	Sub-assembly	583.1	Pin for motor coupling	
514.1	Axial needle roller bearing	Sub-assembly	584.0	Retaining spring for motor coupling	Sub-assembly
514.2	Radial seal for output drive type A		614.0	EWG position transmitter	Sub-assembly
516.0	Output drive type D	Sub-assembly	627.0	MWG 05.03 cover	
516.1	Output drive shaft D		S1	Seal kit, small	Set
535.1	Snap ring		S2	Seal kit, large	Set
539.0	Screw plug	Sub-assembly			

15.2. ACV 01.2 actuator controls with SJ electrical connection

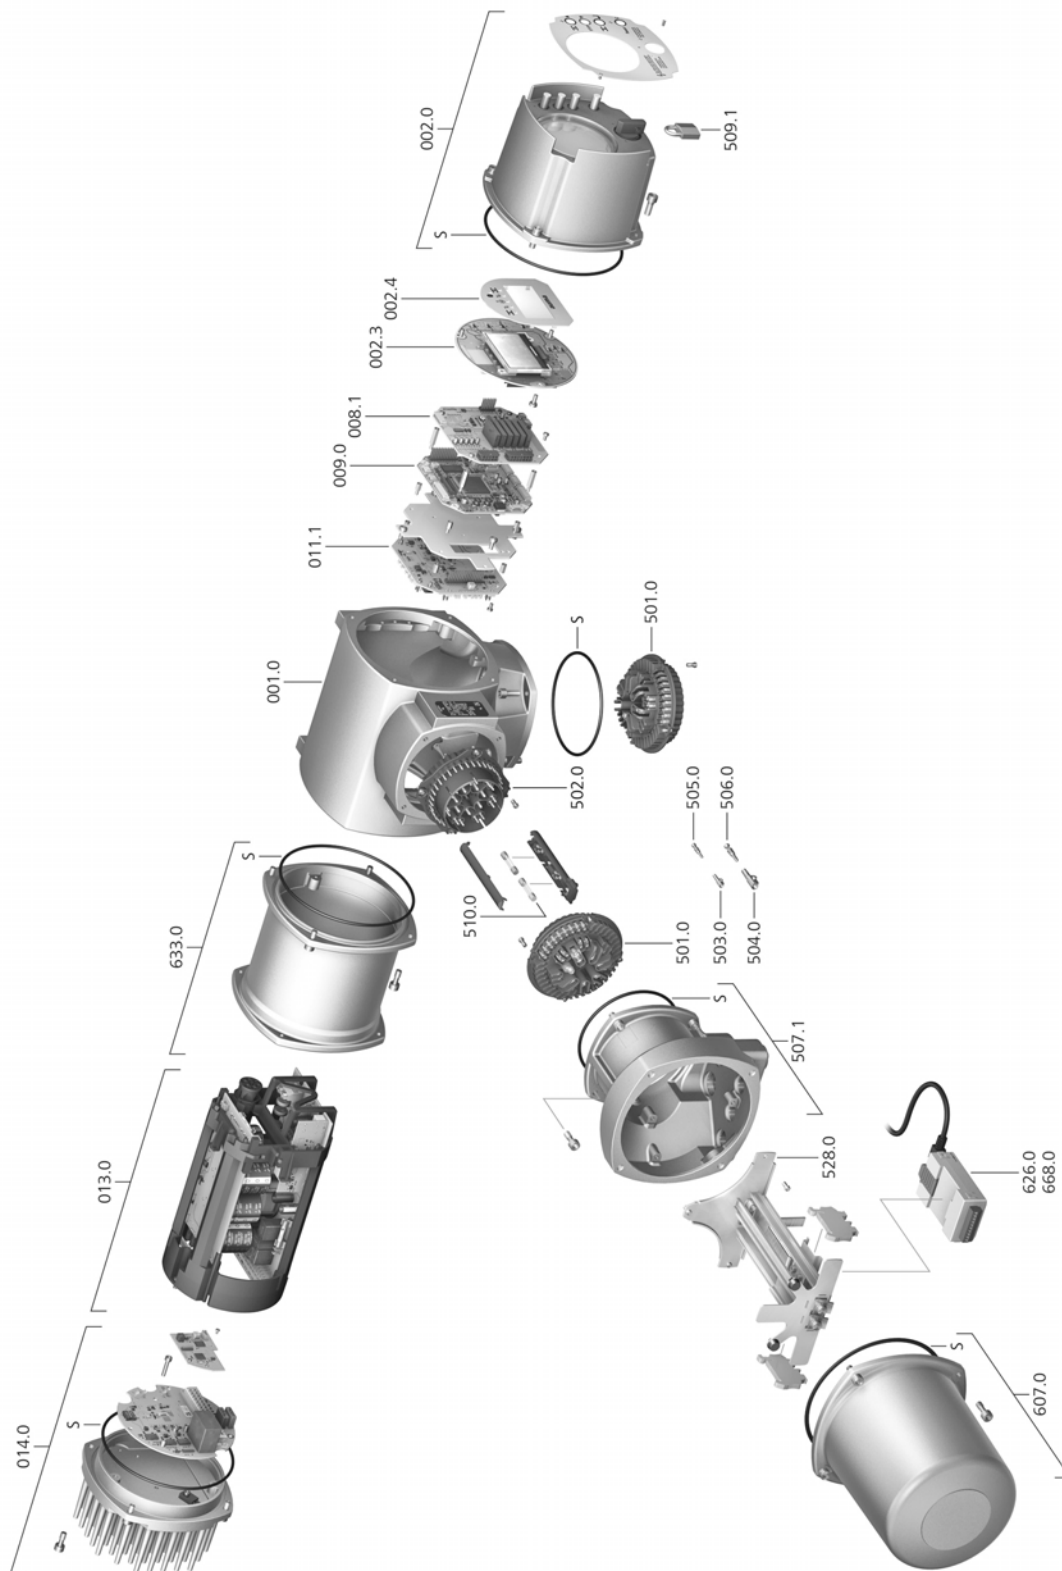


Spare parts

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type
001.0	Housing	Sub-assembly
002.0	Local controls	Sub-assembly
002.3	Local controls board	Sub-assembly
002.4	Face plate for display	
008.1	Fieldbus board	
009.0	Logic board	Sub-assembly
011.1	ACV control board	Sub-assembly
013.0	Switchgear/DC link	
014.0	Motor controller	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly
503.0	Socket for controls	Sub-assembly
504.0	Socket for motor	Sub-assembly
505.0	Pin for controls	Sub-assembly
506.0	Pin for motor	Sub-assembly
507.1	Frame for electrical connection	Sub-assembly
509.1	Padlock	Sub-assembly
510.0	Fuse kit	Set
528.0	Terminal frame (without terminals)	
607.0	Cover	
626.0	Modbus TCP/IP Gateway	
633.0	Switchgear housing	Sub-assembly
668.0	EtherNet/IP Gateway	
S	Seal kit	Set

15.3. ACV 01.2 actuator controls with SF electrical connection

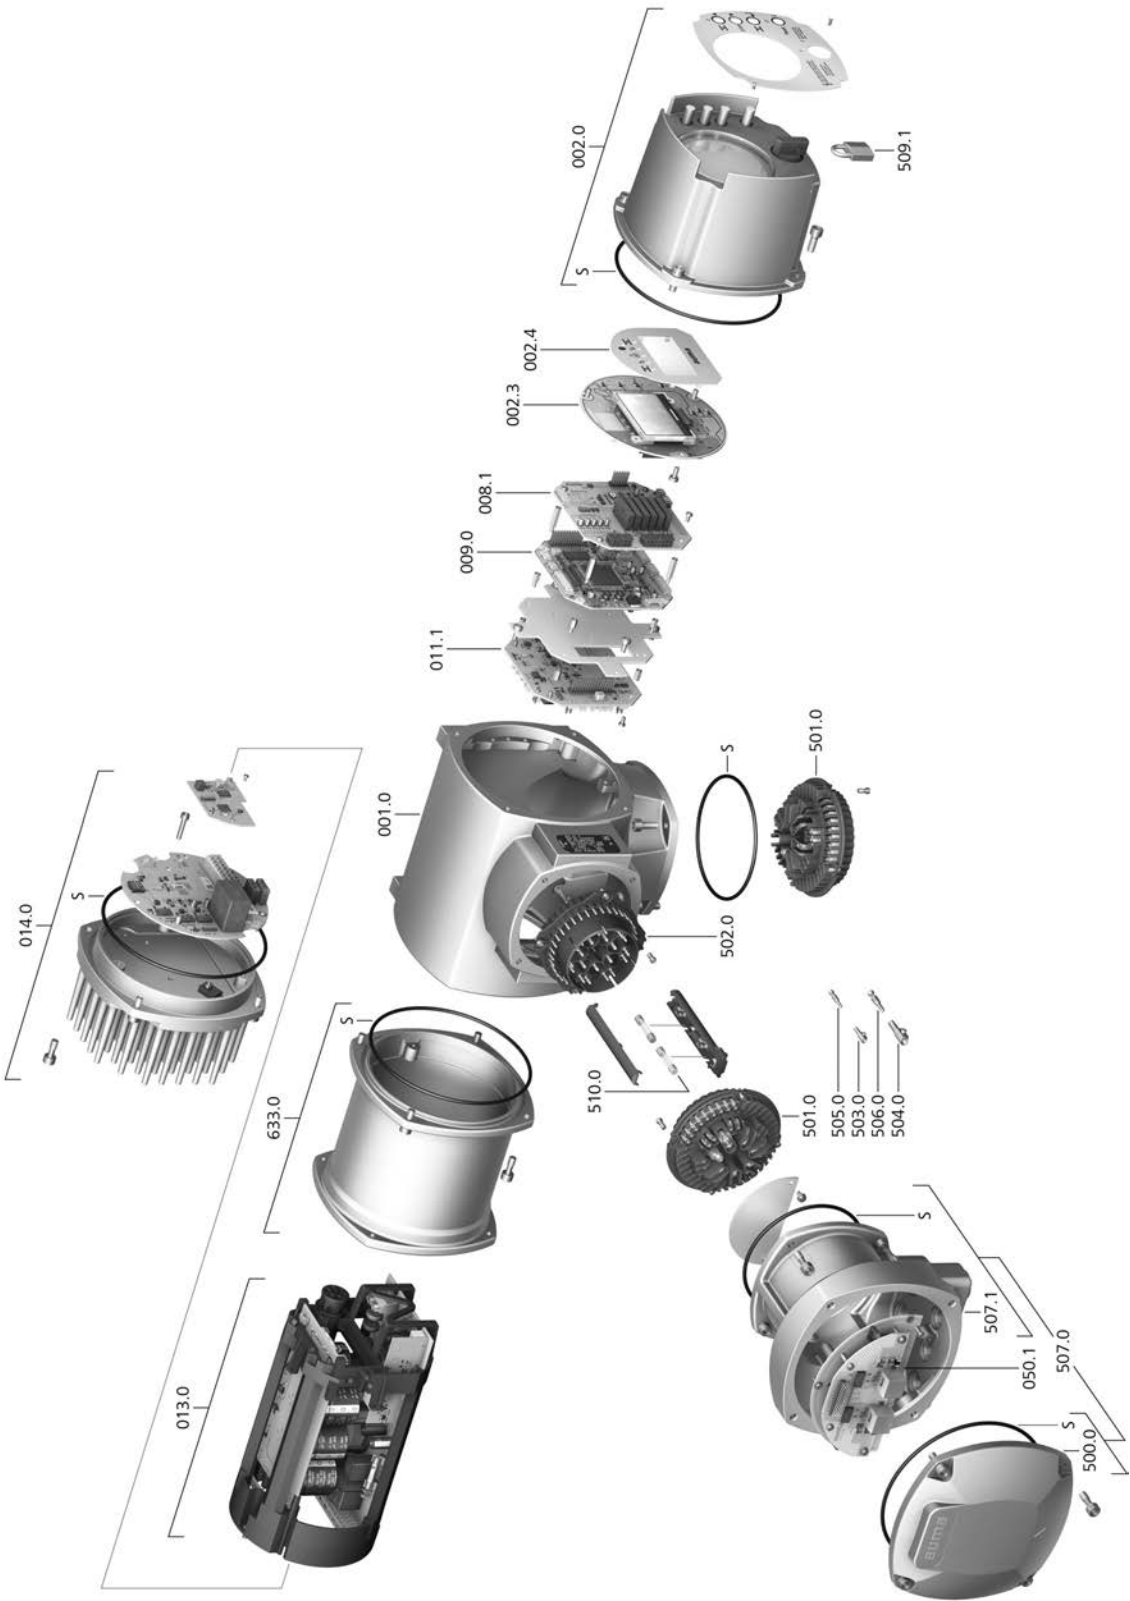

Spare parts

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type
001.0	Housing	Sub-assembly
002.0	Local controls	Sub-assembly
002.3	Local controls board	Sub-assembly
002.4	Face plate for display	
008.1	Fieldbus board	
009.0	Logic board	Sub-assembly
011.1	Relay board	Sub-assembly
013.0	Switchgear/DC link	
014.0	Motor controller	Sub-assembly
050.1	Fieldbus connection board	Sub-assembly
500.0	Cover	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly
503.0	Socket for controls	Sub-assembly
504.0	Socket for motor	Sub-assembly
505.0	Pin for controls	Sub-assembly
506.0	Pin for motor	Sub-assembly
507.0	Electrical connection for fieldbus without connection board (050.1)	Sub-assembly
507.1	Frame for electrical connection	Sub-assembly
509.1	Padlock	Sub-assembly
510.0	Fuse kit	Kit
633.0	Switchgear housing	Sub-assembly
S	Seal kit	Set

Index

A

Accessories (electrical connection)	39
Accessories for assembly	23
Actual value - indication on display	51
Actuator controls wiring diagram	11
Actuator operation from remote	43
Actuator terminal plan	11, 12
Ambient temperature	10, 11, 82, 85
Analogue signals	57
Applications	5
Assembly	16
Assistant App	12
AUMA Assistant App	9, 12
AUMA Cloud	9

B

Blanking plug	27
Bluetooth	9

C

Cable entries	81
Cable glands	27
Cables	27
CDT	9
Coating	85
Colour	85
Commissioning	5
Commissioning (indications on display)	49
Commission number	10
Connecting cables	27
Control	11, 12
Control inputs Potential	26
Control voltage	12
Corrective action	74
Corrosion protection	14, 83, 85
Current type	25

D

Data Matrix code	12
Device type	12
Digital outputs	57
Direct display via ID	45
Direction of rotation	64, 66
Directives	5
Display (indications)	49
Disposal	80
Double sealed	40

E

Earth connection	40
Electrical connection	25, 81
Electrical connections	27
EMC	27
Enclosure protection	10, 11, 82, 85
Error - indication on display	50

F

Failure - indication on display	54
Fault	74
Fault - indication on display	53
Features and functions	84
Flange size	12
Frequency range	25
Function check - indication on display	53
Fuse	26
Fuses	77

H

Handwheel	16
Heating system	26
Hollow shaft	66
Humidity	82, 85

I

Incorrect entry	47
Indication lights	55
Indications	49
Indications on display	49
Indicator disc	56, 69, 71
Indicator mark	56
Input current	12
Input signal	12
Input signals Potential	26
Inspection certificate	12
Installation altitude	85
Insulation class	11, 81
Intermediate frame	40
Intermediate position indication via LEDs	55
Intrusive	8

L

Language in the display	47
LEDs (indication lights)	55
Lifetime	83
Local actuator operation	42
Local control	42
Local controls	42
Local setting	43
Lubrication	80

M

Main menu	44
Mains/voltage range/frequency range	11
Mains frequency	81
Mains voltage	25, 81
Maintenance	5, 79, 80
Maintenance required - indication on display	54
Manual operation	41, 81
Maximum current	11
Mechanical position indicator	56, 56, 69, 71
Mechanical position indicator (self-adjusting)	69
Menu navigation	43
Motor heater	81
Motor operation	42
Motor protection	11, 81
Motors	81
Motor type	11
Mounting position	85

N

Name plate	10
Non-Intrusive	8
Not ready REMOTE - indication on display	53
Number of starts	11

O

Operating the actuator from local controls	42
Operation	5, 41
Operation commands - indications on display	51
Order number	10, 11, 12
Out of specification - indication on display	53
Output contacts	57
Output drive type A	17
Output drive types	17
Output drive types B	21
Output signals	57
Output signals Potential	26
Output speed setting	63
Overload protection	41
Overvoltage category	81

P

Parking frame	39
Password	45
Password change	46
Password entry	46
Pollution degree	85
Positioner - indication on display	51
Position indicator	56, 56, 69, 71
Position transmitter	12
Production, year	12
Protection on site	25, 26
Protective measures	5
Push-to-run operation	43

Q

Qualification of staff	5
------------------------	---

R

Range of application	5
Rated current	11, 26
Rated power	11, 26
Rated power of the ACV	11
Rated voltage	11
Recycling	80
Reduction gearing	71
reductions	27
Remote actuator operation	43
Residual current device (RCD)	26
Running indication	56, 56

S

Safety instructions	5
Safety instructions/warnings	5
Safety measures	26
Safety standards	26
Screw plugs	27
Self-locking	81
Self-retaining	43
Serial number	10, 11, 12
Service	79
Servicing	79
Setpoint - indication on display	51
Short-circuit protection	25
Signals	57
Signals (analogue)	57
Size	12
Spare parts	87
Speed range	10
Standards	5
Status menu	44
Status signals	57
Status signals Potential	26
Stem	66
Stem nut	20
Stem protection tube	23
Storage	14
Supply networks	25
Support	79

T

Technical data	81
Temperature protection	11
Terminal plan	25, 81
Test run	64
Timeout	47
Torque - indication on display	50
Torque range	10
Torque switching	59
Transport	13
Type (device type)	12
Type designation	10, 11
Type of duty	81
Type of lubricant	10
Type of networks	25

U

User level	45
------------	----

V

Valve attachment	17, 81
Valve position - indication on display	50
Valve stem	23
Vibration resistance	85
Voltage range	25

W

Warnings - indication on display	52
Wiring diagram	12, 25

Y

Year of production	12
--------------------	----

AUMA Riester GmbH & Co. KG

P.O. Box 1362
DE 79373 Muellheim
Tel +49 7631 809 - 0
Fax +49 7631 809 - 1250
info@auma.com
www.auma.com